

## Dacia V11.12 Diagnostics List (Note:For reference only)

| Vehicle      | Systems              | Functions |
|--------------|----------------------|-----------|
| 1304 PK 1.9D | immobiliser          | V,C,D     |
|              | diesel injection     | V,C,D     |
|              | connection unit      | V,C,D     |
| 1304 DS 1.9D | immobiliser          | V,C,D     |
|              | diesel injection     | V,C,D     |
|              | connection unit      | V,C,D     |
| 1305 PK 1.9D | immobiliser          | V,C,D     |
|              | diesel injection     | V,C,D     |
|              | connection unit      | V,C,D     |
| 1305 DS 1.9D | immobiliser          | V,C,D     |
|              | diesel injection     | V,C,D     |
|              | connection unit      | V,C,D     |
| D.CAB1.9D    | immobiliser          | V,C,D     |
|              | diesel injection     | V,C,D     |
|              | connection unit      | V,C,D     |
| SUPERNOVA    | petrol injection     | V,C,D     |
|              | immobiliser          | V,C,D     |
|              | connection unit      | V,C,D     |
| SOLENZA      | petrol injection     | V,C,D     |
|              | immobiliser          | V,C,D     |
|              | diesel injection     | V,C,D     |
|              | connection unit      | V,C,D     |
|              | airbag/pretensioners | V,C,D     |
| LOGAN        | airbag/pretensioners | V,C,D     |
|              | injection            | V,C,D     |
|              | a.b.s                | V,C,D     |
|              | pas                  | V,C,D     |
|              | uch                  | V,C,D     |

## Dacia V11.12 Diagnostics List (Note:For reference only)

| Vehicle | Systems              | Functions |
|---------|----------------------|-----------|
|         | at                   | V,C,D     |
| SANDERO | airbag/pretensioners | V,C,D     |
|         | injection            | V,C,D     |
|         | a.b.s                | V,C,D     |
|         | uch                  | V,C,D     |
|         | at                   | V,C,D     |
| DUSTER  | injection            | V,C,D     |
|         | uch                  | V,C,D     |
|         | a.b.s                | V,C,D     |
|         | pas                  | V,C,D     |
|         | at                   | V,C,D     |
|         | tracker              | V,C,D     |
|         | 4 wheels drive       | V,C,D     |

|              |                                |
|--------------|--------------------------------|
| <b>Note:</b> |                                |
| <b>V</b>     | <b>System Version Info</b>     |
| <b>C</b>     | <b>DTC</b>                     |
| <b>D</b>     | <b>Data Display</b>            |
| <b>A</b>     | <b>Action Test</b>             |
| <b>R</b>     | <b>Read Configure info</b>     |
| <b>F</b>     | <b>Configure Info</b>          |
|              |                                |
| <b>S1</b>    | <b>key assignment</b>          |
| <b>S1</b>    | <b>card test</b>               |
| <b>S2</b>    | <b>Enter Injector Codes</b>    |
| <b>S2</b>    | <b>EGR adaptives</b>           |
| <b>S2</b>    | <b>programmed values</b>       |
| <b>S2</b>    | <b>unlock injector control</b> |

## Dacia V11.12 Diagnostics List (Note:For reference only)

| Vehicle | Systems                                   | Functions |
|---------|---|-----------|
| S2      | lock injector control                     |           |
| S2      | Programming Reinitialisation              |           |
| S2      | Fuel supply prevention                    |           |
| S2      | Stop fuel supply prevention               |           |
| S2      | Decrement idle speed                      |           |
| S2      | Increment of idle speed                   |           |
| S3      | Check target teeth                        |           |
| S3      | Bleed hydraulic unit and braking circuits |           |
| S3      | Vehicle Parameters                        |           |
| S3      | Speedo Index                              |           |
| S4      | Fuel Sender Calibration                   |           |
| S4      | Update Odometer                           |           |
| S4      | Oil Change Interval In Km                 |           |
| S4      | Oil Change Range: Current Value In Km     |           |
| S4      | Oil Change Interval In Months             |           |
| S4      | Oil Change Range: Current Value In Months |           |
| S4      | Oil Change Interval In Km                 |           |
| S4      | Oil Change Interval In Months             |           |
| S4      | Oil service and odometry miles-KM         |           |
| S5      | Programming the codes of the four valves  |           |
| S5      | New vehicle storage mode deactivation     |           |
| S6      | Write Date Of Last After Sales Operation  |           |
| S7      | Write Transmission Oil Change Date        |           |
| S7      | Converter Lock Up Adaptive                |           |
| S7      | Auto-Adaptives                            |           |
| S8      | Save clutch pedal programming             |           |
| S8      | Write clutch pedal programming            |           |
| S8      | steering wheel angle sensor programming   |           |

## **Dacia V11.12 Diagnostics List** (Note:For reference only)

| <b>Vehicle</b> | <b>Systems</b>                           | <b>Functions</b> |
|----------------|--|------------------|
| S9             | Sensor offsets                           |                  |
| Y1             | Write Date Of Last After Sales Operation |                  |
| Y2             | Calibration                              |                  |
| Y3             | Steering angle sensor initialisation     |                  |
| Y4             | Slope sensor adjustment                  |                  |
| Y5             | air conditioning programming             |                  |
| Y5             | Oil change couter offset                 |                  |
| Y5             | Auto-adaptives                           |                  |
| Y6             | Streering wheel angle offset sensor      |                  |
| Y6             | Brake pressure offset sensor.            |                  |
| Y7             | Engine adaptives                         |                  |
| Y7             | Pressure regulation adaptives            |                  |
| Y7             | Particle filter relative pressure sensor |                  |
| Y7             | Exhaust injector circuit                 |                  |
| Y7             | Air damper valve programming             |                  |