

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	COLT	ENGINE		√	√	√
JAPAN	COLT	AT		√	√	√
JAPAN	COLT	ABS	√	√	√	√
JAPAN	COLT	SRS	√	√	√	√
JAPAN	COLT	SWS		√	√	√
JAPAN	COLT	AC	√	√	√	√
JAPAN	COLT	METER	√	√	√	√
JAPAN	COLT	ETACS	√	√	√	√
JAPAN	COLT	4WS/EPS	√	√	√	√
JAPAN	COLT	POWER GATE	√	√	√	√
JAPAN	COLT PLUS	ENGINE		√	√	√
JAPAN	COLT PLUS	AT		√	√	√
JAPAN	COLT PLUS	ABS	√	√	√	√
JAPAN	COLT PLUS	SRS	√	√	√	√
JAPAN	COLT PLUS	SWS		√	√	√
JAPAN	COLT PLUS	AC	√	√	√	√
JAPAN	COLT PLUS	METER	√	√	√	√
JAPAN	COLT PLUS	ETACS	√	√	√	√
JAPAN	COLT PLUS	4WS/EPS	√	√	√	√
JAPAN	COLT PLUS	POWER GATE	√	√	√	√
JAPAN	DELICA D:5	ENGINE	√	√	√	√
JAPAN	DELICA D:5	AT	√	√	√	√
JAPAN	DELICA D:5	ABS	√	√	√	√
JAPAN	DELICA D:5	SRS	√	√	√	√
JAPAN	DELICA D:5	AC	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	DELICA D:5	METER	√	√	√	√
JAPAN	DELICA D:5	ETACS	√	√	√	√
JAPAN	DELICA D:5	SAS	√	√	√	
JAPAN	DELICA D:5	IMMO	√	√	√	√
JAPAN	DELICA D:5	AUTO CRUISE	√	√	√	√
JAPAN	DELICA D:5	AFS/ACL	√	√	√	√
JAPAN	DELICA D:5	CAMERA	√	√	√	√
JAPAN	DELICA D:5	POWER GATE	√	√	√	√
JAPAN	DELICA D:5	AND	√	√	√	√
JAPAN	DELICA D:5	LIN	√	√	√	√
JAPAN	DELICA D:5	ELECTRIC SLIDE DOOR R	√	√	√	√
JAPAN	DELICA D:5	ELECTRIC SLIDE DOOR L	√	√	√	√
JAPAN	DELICA D:5	MULTI SELECT 4WD	√	√	√	√
JAPAN	DELICA D:5	CORNER SENSOR/BACK SENSOR	√	√	√	√
JAPAN	DELICA D:5	AS&G	√	√	√	√
JAPAN	DELICA SPACE GEAR	ENGINE		√	√	√
JAPAN	DELICA SPACE GEAR	AT		√	√	√
JAPAN	DELICA SPACE GEAR	ABS	√	√	√	√
JAPAN	DELICA SPACE GEAR	SRS	√	√	√	√
JAPAN	DELICA SPACE GEAR	AC	√	√	√	√
JAPAN	DELICA SPACE GEAR	ETACS	√	√	√	√
JAPAN	DELICA SPACE GEAR	ECS		√	√	√
JAPAN	DELICA VAN / CARGO /TRUCK	ENGINE		√	√	√
JAPAN	DELICA VAN / CARGO /TRUCK	AT		√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	DELICA VAN / CARGO /TRUCK	ABS	√	√	√	√
JAPAN	DELICA VAN / CARGO /TRUCK	METER	√	√	√	√
JAPAN	EK-SPACE	ENGINE	√	√	√	√
JAPAN	EK-SPACE	AT	√	√	√	√
JAPAN	EK-SPACE	ABS	√	√	√	√
JAPAN	EK-SPACE	SRS	√	√	√	√
JAPAN	EK-SPACE	AC	√	√	√	√
JAPAN	EK-SPACE	METER	√	√	√	√
JAPAN	EK-SPACE	IMMO	√	√	√	√
JAPAN	EK-SPACE	SAS	√	√	√	√
JAPAN	EK-SPACE	4WS/EPS	√	√	√	√
JAPAN	EK-SPACE	ELECTRIC SLIDE DOOR R	√	√	√	√
JAPAN	EK-SPACE	ELECTRIC SLIDE DOOR L	√	√	√	√
JAPAN	EK-SPACE	AFS/ACL	√	√	√	√
JAPAN	EK-SPACE	Assist Battery	√	√	√	√
JAPAN	EK-SPACE	Multi Around Monitor	√	√	√	√
JAPAN	EK-WAGON(B11W)	ENGINE	√	√	√	√
JAPAN	EK-WAGON(B11W)	AT	√	√	√	√
JAPAN	EK-WAGON(B11W)	ABS	√	√	√	√
JAPAN	EK-WAGON(B11W)	SRS	√	√	√	√
JAPAN	EK-WAGON(B11W)	AC	√	√	√	√
JAPAN	EK-WAGON(B11W)	METER	√	√	√	√
JAPAN	EK-WAGON(B11W)	IMMO	√	√	√	√
JAPAN	EK-WAGON(B11W)	SAS	√	√	√	√
JAPAN	EK-WAGON(B11W)	4WS/EPS	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	EK-WAGON(B11W)	AFS/ACL	√	√	√	√
JAPAN	EK-WAGON(H81W)	ENGINE		√	√	√
JAPAN	EK-WAGON(H81W)	AT		√	√	√
JAPAN	EK-WAGON(H81W)	ABS	√	√	√	√
JAPAN	EK-WAGON(H81W)	SRS	√	√	√	√
JAPAN	EK-WAGON(H81W)	SWS		√	√	√
JAPAN	EK-WAGON(H82W)	ENGINE		√	√	√
JAPAN	EK-WAGON(H82W)	AT		√	√	√
JAPAN	EK-WAGON(H82W)	ABS	√	√	√	√
JAPAN	EK-WAGON(H82W)	SRS	√	√	√	√
JAPAN	EK-WAGON(H82W)	SWS		√	√	√
JAPAN	GALANT FORTIS	ENGINE	√	√	√	√
JAPAN	GALANT FORTIS	AT	√	√	√	√
JAPAN	GALANT FORTIS	ABS	√	√	√	√
JAPAN	GALANT FORTIS	SRS	√	√	√	√
JAPAN	GALANT FORTIS	AC	√	√	√	√
JAPAN	GALANT FORTIS	METER	√	√	√	√
JAPAN	GALANT FORTIS	ETACS	√	√	√	√
JAPAN	GALANT FORTIS	SAS	√	√	√	
JAPAN	GALANT FORTIS	IMMO	√	√	√	√
JAPAN	GALANT FORTIS	AUTO CRUISE	√	√	√	√
JAPAN	GALANT FORTIS	4WS/EPS	√	√	√	√
JAPAN	GALANT FORTIS	AFS/ACL	√	√	√	√
JAPAN	GALANT FORTIS	AYC/ACD	√	√	√	√
JAPAN	GALANT FORTIS	AND	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	GALANT FORTIS	LIN	√	√	√	√
JAPAN	GALANT FORTIS	MULTI SELECT 4WD	√	√	√	√
JAPAN	GALANT FORTIS	AUDIO	√	√	√	√
JAPAN	GALANT FORTIS	SHIFT LEVER	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	ENGINE	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	AT	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	ABS	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	SRS	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	AC	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	METER	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	ETACS	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	STEERING ANGLE SENSOR	√	√	√	
JAPAN	GALANT FORTIS SPORTBACK(CX#)	IMMO	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	AUTO CRUISE	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	AFS/ACL	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	AYC/ACD	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	AND	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	LIN	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	MULTI SELECT 4WD	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	AUDIO	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	SHIFT LEVER	√	√	√	√
JAPAN	GALANT FORTIS SPORTBACK(CX#)	IMMO	√	√	√	√
JAPAN	GRANDIS	ENGINE		√	√	√
JAPAN	GRANDIS	AT		√	√	√
JAPAN	GRANDIS	ABS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	GRANDIS	SRS	√	√	√	√
JAPAN	GRANDIS	SWS		√	√	√
JAPAN	GRANDIS	AC	√	√	√	√
JAPAN	GRANDIS	METER	√	√	√	√
JAPAN	GRANDIS	ETACS	√	√	√	√
JAPAN	GRANDIS	SAS	√	√	√	
JAPAN	GRANDIS	IMMO	√	√	√	√
JAPAN	GRANDIS	AUTO CRUISE	√	√	√	√
JAPAN	GRANDIS	CAMERA	√	√	√	√
JAPAN	GRANDIS	POWER GATE	√	√	√	
JAPAN	GRANDIS	DISPLAY	√	√	√	
JAPAN	GRANDIS	KEYLESS OPERATION	√	√	√	
JAPAN	GRANDIS	MULTI SELECT 4WD	√	√	√	√
JAPAN	I	ENGINE	√	√	√	√
JAPAN	I	AT	√	√	√	√
JAPAN	I	ABS	√	√	√	√
JAPAN	I	SRS	√	√	√	√
JAPAN	I	AC	√	√	√	√
JAPAN	I	METER	√	√	√	√
JAPAN	I	ETACS	√	√	√	√
JAPAN	I	4WS/EPS	√	√	√	√
JAPAN	I	LIN	√	√	√	√
JAPAN	I	KEYLESS OPERATION	√	√	√	√
JAPAN	I-MIEV	ABS	√	√	√	√
JAPAN	I-MIEV	SRS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	I-MIEV	AC	√	√	√	√
JAPAN	I-MIEV	METER	√	√	√	√
JAPAN	I-MIEV	ETACS	√	√	√	√
JAPAN	I-MIEV	4WS/EPS	√	√	√	√
JAPAN	I-MIEV	LIN	√	√	√	√
JAPAN	I-MIEV	KEYLESS OPERATION	√	√	√	√
JAPAN	I-MIEV	EV-ECU	√	√	√	√
JAPAN	I-MIEV	BMU	√	√	√	√
JAPAN	I-MIEV	COMP&HTR	√	√	√	√
JAPAN	I-MIEV	MCU	√	√	√	√
JAPAN	I-MIEV	CMU1	√			√
JAPAN	I-MIEV	CMU2	√			√
JAPAN	I-MIEV	CMU3	√			√
JAPAN	I-MIEV	CMU4	√			√
JAPAN	I-MIEV	CMU5	√			√
JAPAN	I-MIEV	CMU6	√			√
JAPAN	I-MIEV	CMU7	√			√
JAPAN	I-MIEV	CMU8	√			√
JAPAN	I-MIEV	CMU9	√			√
JAPAN	I-MIEV	CMU10	√			√
JAPAN	I-MIEV	CMU11	√			√
JAPAN	I-MIEV	CMU12	√			√
JAPAN	I-MIEV	SAS	√	√	√	
JAPAN	LANCER	ENGINE		√	√	√
JAPAN	LANCER	AT		√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	LANCER	ABS	√	√	√	√
JAPAN	LANCER	SRS	√	√	√	√
JAPAN	LANCER	SWS		√	√	√
JAPAN	LANCER	AC	√	√	√	√
JAPAN	LANCER	AYC/ACD	√	√	√	√
JAPAN	LANCER CARGO	ENGINE		√	√	√
JAPAN	LANCER CARGO	ABS	√	√	√	√
JAPAN	LANCER CARGO	SRS	√	√	√	√
JAPAN	LANCER CARGO	SWS		√	√	√
JAPAN	LANCER CARGO	AT		√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	ENGINE	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	AT	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	ABS	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	SRS	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	AC	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	METER	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	ETACS	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	STEERING ANGLE SENSOR	√	√	√	
JAPAN	LANCER EVOLUTION(CZ#)	IMMO	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	AFS/ACL	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	AYC/ACD	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	AND	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	LIN	√	√	√	√



## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	LANCER EVOLUTION(CZ#)	AUDIO	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	HFM	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	SHIFT LEVER	√	√	√	√
JAPAN	LANCER EVOLUTION(CZ#)	AUTO CRUISE	√	√	√	√
JAPAN	LANCER WAGON	ENGINE		√	√	√
JAPAN	LANCER WAGON	AT		√	√	√
JAPAN	LANCER WAGON	ABS	√	√	√	√
JAPAN	LANCER WAGON	SRS	√	√	√	√
JAPAN	LANCER WAGON	SWS		√	√	√
JAPAN	LANCER WAGON	AC	√	√	√	√
JAPAN	LANCER WAGON	IMMO	√	√	√	√
JAPAN	LANCER WAGON	AYC/ACD	√	√	√	√
JAPAN	MINICA	ENGINE		√	√	√
JAPAN	MINICA	ABS	√	√	√	√
JAPAN	MINICA	SRS	√	√	√	√
JAPAN	MINICA	SWS		√	√	√
JAPAN	MINICAB / TOWNBOX	ENGINE		√	√	√
JAPAN	MINICAB / TOWNBOX	ABS	√	√	√	√
JAPAN	MINICAB / TOWNBOX	SRS	√	√	√	√
JAPAN	MINICAB / TOWNBOX	SWS		√	√	√
JAPAN	MINICAB / TOWNBOX	AT		√	√	√
JAPAN	MINICAB-MiEV	ABS	√	√	√	√
JAPAN	MINICAB-MiEV	SRS	√	√	√	√
JAPAN	MINICAB-MiEV	AC	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	MINICAB-MiEV	METER	√	√	√	√
JAPAN	MINICAB-MiEV	ETACS	√	√	√	√
JAPAN	MINICAB-MiEV	4WS/EPS	√	√	√	√
JAPAN	MINICAB-MiEV	EV-ECU	√	√	√	√
JAPAN	MINICAB-MiEV	BMU	√	√	√	√
JAPAN	MINICAB-MiEV	DC/DC Converter	√	√	√	√
JAPAN	MINICAB-MiEV	COMP&HTR	√	√	√	√
JAPAN	MINICAB-MiEV	MCU	√	√	√	√
JAPAN	MINICAB-MiEV	OBC	√	√	√	√
JAPAN	MINICAB-MiEV	CMU1	√			√
JAPAN	MINICAB-MiEV	CMU2	√			√
JAPAN	MINICAB-MiEV	CMU3	√			√
JAPAN	MINICAB-MiEV	CMU4	√			√
JAPAN	MINICAB-MiEV	CMU5	√			√
JAPAN	MINICAB-MiEV	CMU6	√			√
JAPAN	MINICAB-MiEV	CMU7	√			√
JAPAN	MINICAB-MiEV	CMU8	√			√
JAPAN	MINICAB-MiEV	CMU9	√			√
JAPAN	MINICAB-MiEV	CMU10	√			√
JAPAN	MINICAB-MiEV	CMU11	√			√
JAPAN	MINICAB-MiEV	CMU12	√			√
JAPAN	MIRAGE	ENGINE	√	√	√	√
JAPAN	MIRAGE	AT	√	√	√	√
JAPAN	MIRAGE	ABS	√	√	√	√
JAPAN	MIRAGE	SRS	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	MIRAGE	AC	√	√	√	√
JAPAN	MIRAGE	METER	√	√	√	√
JAPAN	MIRAGE	TPMS	√	√	√	√
JAPAN	MIRAGE	ETACS	√	√	√	√
JAPAN	MIRAGE	IMMO	√	√	√	√
JAPAN	MIRAGE	4WS/EPS	√	√	√	√
JAPAN	MIRAGE	SAS	√	√	√	√
JAPAN	MIRAGE	OSS	√	√	√	√
JAPAN	OUTLANDER(CW#)	ENGINE	√	√	√	√
JAPAN	OUTLANDER(CW#)	AT	√	√	√	√
JAPAN	OUTLANDER(CW#)	ABS	√	√	√	√
JAPAN	OUTLANDER(CW#)	SRS	√	√	√	√
JAPAN	OUTLANDER(CW#)	AC	√	√	√	√
JAPAN	OUTLANDER(CW#)	METER	√	√	√	√
JAPAN	OUTLANDER(CW#)	ETACS	√	√	√	√
JAPAN	OUTLANDER(CW#)	SAS	√	√	√	
JAPAN	OUTLANDER(CW#)	IMMO	√	√	√	√
JAPAN	OUTLANDER(CW#)	AUTO CRUISE	√	√	√	√
JAPAN	OUTLANDER(CW#)	AND	√	√	√	√
JAPAN	OUTLANDER(CW#)	LIN	√	√	√	√
JAPAN	OUTLANDER(CW#)	MULTI SELECT 4WD	√	√	√	√
JAPAN	OUTLANDER(CW#)	AUDIO	√	√	√	√
JAPAN	OUTLANDER(CW#)	AFS/ACL	√	√	√	√
JAPAN	OUTLANDER (GF#)	ENGINE	√	√	√	√
JAPAN	OUTLANDER (GF#)	AT	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	OUTLANDER (GF#)	ABS	√	√	√	√
JAPAN	OUTLANDER (GF#)	SRS	√	√	√	√
JAPAN	OUTLANDER (GF#)	AC	√	√	√	√
JAPAN	OUTLANDER (GF#)	METER	√	√	√	√
JAPAN	OUTLANDER (GF#)	ETACS	√	√	√	√
JAPAN	OUTLANDER (GF#)	IMMO	√	√	√	√
JAPAN	OUTLANDER (GF#)	AUTO CRUISE	√	√	√	√
JAPAN	OUTLANDER (GF#)	4WS/EPS	√	√	√	√
JAPAN	OUTLANDER (GF#)	SAS	√	√	√	
JAPAN	OUTLANDER (GF#)	LIN	√	√	√	√
JAPAN	OUTLANDER (GF#)	AS&G	√	√	√	√
JAPAN	OUTLANDER (GF#)	AWC	√	√	√	√
JAPAN	OUTLANDER (GF#)	OSS	√	√	√	√
JAPAN	OUTLANDER (GF#)	AND	√	√	√	√
JAPAN	OUTLANDER (GF#)	ACC/FCM	√	√	√	√
JAPAN	OUTLANDER (GF#)	AUDIO	√	√	√	√
JAPAN	OUTLANDER (GF#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
JAPAN	OUTLANDER (GF#)	Lane Keep	√	√	√	√
JAPAN	OUTLANDER (GF#)	Power Gate	√	√	√	√
JAPAN	OUTLANDER-PHEV	ENGINE	√	√	√	√
JAPAN	OUTLANDER-PHEV	ABS	√	√	√	√
JAPAN	OUTLANDER-PHEV	SRS	√	√	√	√
JAPAN	OUTLANDER-PHEV	AC	√	√	√	√
JAPAN	OUTLANDER-PHEV	METER	√	√	√	√
JAPAN	OUTLANDER-PHEV	ETACS	√	√	√	√
JAPAN	OUTLANDER-PHEV	IMMO	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	OUTLANDER-PHEV	4WS/EPS	√	√	√	√
JAPAN	OUTLANDER-PHEV	SAS	√	√	√	√
JAPAN	OUTLANDER-PHEV	LIN	√	√	√	√
JAPAN	OUTLANDER-PHEV	BMU	√	√	√	√
JAPAN	OUTLANDER-PHEV	EV/MiEV Remote System	√	√	√	√
JAPAN	OUTLANDER-PHEV	OSS	√	√	√	√
JAPAN	OUTLANDER-PHEV	AWC	√	√	√	√
JAPAN	OUTLANDER-PHEV	OSS	√	√	√	√
JAPAN	OUTLANDER-PHEV	AND	√	√	√	√
JAPAN	OUTLANDER-PHEV	ACC/FCM	√	√	√	√
JAPAN	OUTLANDER-PHEV	AUDIO	√	√	√	√
JAPAN	OUTLANDER-PHEV	CORNER SENSOR/BACK SENSOR	√	√	√	√
JAPAN	OUTLANDER-PHEV	Compressor	√	√	√	√
JAPAN	OUTLANDER-PHEV	F-MCU	√	√	√	√
JAPAN	OUTLANDER-PHEV	GCU	√	√	√	√
JAPAN	OUTLANDER-PHEV	Lane Keep	√	√	√	√
JAPAN	OUTLANDER-PHEV	OBC	√	√	√	√
JAPAN	OUTLANDER-PHEV	P LOCK	√	√	√	√
JAPAN	OUTLANDER-PHEV	Power Gate	√	√	√	√
JAPAN	OUTLANDER-PHEV	PHEV	√	√	√	√
JAPAN	OUTLANDER-PHEV	R-MCU	√	√	√	√
JAPAN	OUTLANDER-PHEV	CMU1	√			√
JAPAN	OUTLANDER-PHEV	CMU2	√			√
JAPAN	OUTLANDER-PHEV	CMU3	√			√
JAPAN	OUTLANDER-PHEV	CMU4	√			√
JAPAN	OUTLANDER-PHEV	CMU5	√			√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	OUTLANDER-PHEV	CMU7	√			√
JAPAN	OUTLANDER-PHEV	CMU8	√			√
JAPAN	OUTLANDER-PHEV	CMU9	√			√
JAPAN	OUTLANDER-PHEV	CMU10	√			√
JAPAN	OUTLANDER-PHEV	CMU11	√			√
JAPAN	PAJERO(V6#,V7#)	ENGINE		√	√	√
JAPAN	PAJERO(V6#,V7#)	AT		√	√	√
JAPAN	PAJERO(V6#,V7#)	ABS	√	√	√	√
JAPAN	PAJERO(V6#,V7#)	SRS	√	√	√	√
JAPAN	PAJERO(V6#,V7#)	SWS	√	√	√	√
JAPAN	PAJERO(V6#,V7#)	AC	√	√	√	√
JAPAN	PAJERO(V6#,V7#)	IMMO	√	√	√	√
JAPAN	PAJERO(V6#,V7#)	TCL/STABILITY CONTROL	√	√	√	√
JAPAN	PAJERO(V6#,V7#)	SS4II		√	√	√
JAPAN	PAJERO(V6#,V7#)	AUTO CRUISE		√	√	√
JAPAN	PAJERO(V6#,V7#)	HBB		√	√	√
JAPAN	PAJERO(V8#,V9#)	ENGINE	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	ABS	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	SRS	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	SWS		√	√	√
JAPAN	PAJERO(V8#,V9#)	AC	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	METER	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	ETACS	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	IMMO	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	SS4II		√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	PAJERO(V8#,V9#)	HBB		√	√	√
JAPAN	PAJERO(V8#,V9#)	DISPLAY	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	AT	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	AUTO CRUISE	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	LIN	√	√	√	√
JAPAN	PAJERO(V8#,V9#)	CAN/LIN/SWS converter	√	√	√	√
JAPAN	PAJERO lo	ENGINE		√	√	√
JAPAN	PAJERO lo	AT		√	√	√
JAPAN	PAJERO lo	ABS	√	√	√	√
JAPAN	PAJERO lo	SRS	√	√	√	√
JAPAN	PAJERO lo	SWS		√	√	√
JAPAN	PAJERO lo	AC	√	√	√	√
JAPAN	PAJERO MINI	ENGINE		√	√	√
JAPAN	PAJERO MINI	AT		√	√	√
JAPAN	PAJERO MINI	ABS	√	√	√	√
JAPAN	PAJERO MINI	SRS	√	√	√	√
JAPAN	PAJERO MINI	SWS		√	√	√
JAPAN	RVR	ENGINE	√	√	√	√
JAPAN	RVR	AT	√	√	√	√
JAPAN	RVR	ABS	√	√	√	√
JAPAN	RVR	SRS	√	√	√	√
JAPAN	RVR	AC	√	√	√	√
JAPAN	RVR	METER	√	√	√	√
JAPAN	RVR	ETACS	√	√	√	√
JAPAN	RVR	SAS	√	√	√	

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
JAPAN	RVR	IMMO	√	√	√	√
JAPAN	RVR	AUTO CRUISE	√	√	√	√
JAPAN	RVR	4WS/EPS	√	√	√	√
JAPAN	RVR	AFS/ACL	√	√	√	√
JAPAN	RVR	AND	√	√	√	√
JAPAN	RVR	LIN	√	√	√	√
JAPAN	RVR	MULTI SELECT 4WD	√	√	√	√
JAPAN	RVR	OSS	√	√	√	√
JAPAN	TOPPO	ENGINE		√	√	√
JAPAN	TOPPO	AT		√	√	√
JAPAN	TOPPO	ABS	√	√	√	√
JAPAN	TOPPO	SRS	√	√	√	√
JAPAN	TOPPO	SWS		√	√	√
JAPAN	TRITON	ENGINE	√	√	√	√
JAPAN	TRITON	AT	√	√	√	√
JAPAN	TRITON	ABS	√	√	√	√
JAPAN	TRITON	SRS	√	√	√	√
JAPAN	TRITON	AC	√	√	√	√
JAPAN	TRITON	ETACS	√	√	√	√
JAPAN	TRITON	IMMO	√	√	√	√
JAPAN	TRITON	LIN	√	√	√	√
JAPAN	TRITON	DISPLAY	√	√	√	
EUR	ASX	ENGINE	√	√	√	√
EUR	ASX	AT	√	√	√	√
EUR	ASX	ABS	√	√	√	√



## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	ASX	SRS	√	√	√	√
EUR	ASX	AC	√	√	√	√
EUR	ASX	METER	√	√	√	√
EUR	ASX	ETACS	√	√	√	√
EUR	ASX	SAS	√	√	√	
EUR	ASX	IMMO	√	√	√	√
EUR	ASX	AUTO CRUISE	√	√	√	√
EUR	ASX	4WS/EPS	√	√	√	√
EUR	ASX	AFS/ACL	√	√	√	√
EUR	ASX	AND	√	√	√	√
EUR	ASX	LIN	√	√	√	√
EUR	ASX	MULTI SELECT 4WD	√	√	√	√
EUR	ASX	AUDIO	√	√	√	√
EUR	ASX	OSS	√	√	√	√
EUR	ASX	CORNER SENSOR/BACK SENSOR	√	√	√	√
EUR	ASX	AS&G	√	√	√	√
EUR	ATTRAGE	ENGINE	√	√	√	√
EUR	ATTRAGE	AT	√	√	√	√
EUR	ATTRAGE	ABS	√	√	√	√
EUR	ATTRAGE	SRS	√	√	√	√
EUR	ATTRAGE	AC	√	√	√	√
EUR	ATTRAGE	METER	√	√	√	√
EUR	ATTRAGE	ETACS	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	ATTRAGE	TPMS	√	√	√	√
EUR	ATTRAGE	IMMO	√	√	√	√
EUR	ATTRAGE	4WS/EPS	√	√	√	√
EUR	ATTRAGE	SAS	√	√	√	
EUR	ATTRAGE	LIN	√	√	√	√
EUR	ATTRAGE	OSS	√	√	√	√
EUR	COLT CZC	ENGINE	√	√	√	√
EUR	COLT CZC	ABS	√	√	√	√
EUR	COLT CZC	SRS	√	√	√	
EUR	COLT CZC	AC	√	√	√	
EUR	COLT CZC	METER	√	√	√	√
EUR	COLT CZC	ETACS	√	√	√	√
EUR	COLT CZC	IMMO	√	√	√	√
EUR	COLT CZC	4WS/EPS	√	√	√	√
EUR	COLT CZC	DISPLAY	√	√	√	
EUR	COLT CZC	RHT/TOPSTACK	√	√	√	√
EUR	COLT, COLT CZ3 / CZT	ENGINE	√	√	√	√
EUR	COLT, COLT CZ3 / CZT	ABS	√	√	√	√
EUR	COLT, COLT CZ3 / CZT	SRS	√	√	√	
EUR	COLT, COLT CZ3 / CZT	AC	√	√	√	
EUR	COLT, COLT CZ3 / CZT	METER	√	√	√	√
EUR	COLT, COLT CZ3 / CZT	ETACS	√	√	√	√
EUR	COLT, COLT CZ3 / CZT	IMMO	√	√	√	√
EUR	COLT, COLT CZ3 / CZT	4WS/EPS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	COLT,COLT CZ3 / CZT	DISPLAY	√	√	√	
EUR	COLT,COLT CZ3 / CZT	AT	√	√	√	
EUR	GALANT(DJ#)	ENGINE	√	√	√	√
EUR	GALANT(DJ#)	AT	√	√	√	√
EUR	GALANT(DJ#)	ABS	√	√	√	√
EUR	GALANT(DJ#)	SRS	√	√	√	√
EUR	GALANT(DJ#)	SWS		√	√	√
EUR	GALANT(DJ#)	AC	√	√	√	√
EUR	GALANT(DJ#)	METER	√	√	√	√
EUR	GALANT(DJ#)	ETACS	√	√	√	
EUR	GALANT(DJ#)	STEERING ANGLE SENSOR	√	√	√	
EUR	GALANT(DJ#)	IMMO	√	√	√	√
EUR	GALANT(DJ#)	AUTO CRUISE	√	√	√	√
EUR	GALANT(DJ#)	DISPLAY	√	√	√	
EUR	GRANDIS	ENGINE	√	√	√	√
EUR	GRANDIS	ABS	√	√	√	√
EUR	GRANDIS	SRS	√	√	√	√
EUR	GRANDIS	SWS		√	√	√
EUR	GRANDIS	AC	√	√	√	√
EUR	GRANDIS	METER	√	√	√	√
EUR	GRANDIS	ETACS	√	√	√	
EUR	GRANDIS	SAS	√	√	√	
EUR	GRANDIS	IMMO	√	√	√	√
EUR	GRANDIS	AUTO CRUISE		√	√	√
EUR	GRANDIS	DISPLAY	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	GRANDIS	AT		√	√	√
EUR	I	ENGINE	√	√	√	√
EUR	I	AT	√	√	√	√
EUR	I	ABS	√	√	√	√
EUR	I	SRS	√	√	√	√
EUR	I	AC	√	√	√	√
EUR	I	METER	√	√	√	√
EUR	I	ETACS	√	√	√	√
EUR	I	4WS/EPS	√	√	√	√
EUR	I	LIN	√	√	√	√
EUR	I	KEYLESS OPERATION	√	√	√	√
EUR	i-MiEV	ABS	√	√	√	√
EUR	i-MiEV	SRS	√	√	√	√
EUR	i-MiEV	AC	√	√	√	√
EUR	i-MiEV	METER	√	√	√	√
EUR	i-MiEV	ETACS	√	√	√	√
EUR	i-MiEV	SAS	√	√	√	
EUR	i-MiEV	IMMO	√	√	√	√
EUR	i-MiEV	4WS/EPS	√	√	√	√
EUR	i-MiEV	LIN	√	√	√	√
EUR	i-MiEV	KEYLESS OPERATION	√	√	√	√
EUR	i-MiEV	EV-ECU	√	√	√	√
EUR	i-MiEV	BMU	√	√	√	√
EUR	i-MiEV	COMP&HTR	√	√	√	√
EUR	i-MiEV	MCU	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	i-MiEV	CMU1	√			√
EUR	i-MiEV	CMU2	√			√
EUR	i-MiEV	CMU3	√			√
EUR	i-MiEV	CMU4	√			√
EUR	i-MiEV	CMU5	√			√
EUR	i-MiEV	CMU6	√			√
EUR	i-MiEV	CMU7	√			√
EUR	i-MiEV	CMU8	√			√
EUR	i-MiEV	CMU9	√			√
EUR	i-MiEV	CMU10	√			√
EUR	i-MiEV	CMU11	√			√
EUR	i-MiEV	CMU12	√			√
EUR	L200(K6#,K7#)	ENGINE		√	√	√
EUR	L200(K6#,K7#)	ABS	√	√	√	√
EUR	L200(K6#,K7#)	SRS	√	√	√	√
EUR	L200(K6#,K7#)	ETACS	√	√	√	
EUR	L200(K6#,K7#)	IMMO	√	√	√	√
EUR	L200(K6#,K7#)	AC	√	√	√	√
EUR	L200(KA#,KB#)	ENGINE	√	√	√	√
EUR	L200(KA#,KB#)	ABS	√	√	√	√
EUR	L200(KA#,KB#)	SRS	√	√	√	√
EUR	L200(KA#,KB#)	ETACS	√	√	√	√
EUR	L200(KA#,KB#)	IMMO	√	√	√	√
EUR	L200(KA#,KB#)	LIN	√	√	√	√
EUR	L200(KA#,KB#)	AT	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	L200(KA#,KB#)	AC	√	√	√	√
EUR	L200(KA#,KB#)	SAS	√	√	√	√
EUR	L200(KA#,KB#)	DISPLAY	√	√	√	
<b>EUR</b>	<b>L300</b>	<b>SRS</b>		√	√	√
EUR	LANCER(CS#,CT#)	ENGINE		√	√	√
EUR	LANCER(CS#,CT#)	ABS	√	√	√	√
EUR	LANCER(CS#,CT#)	SRS	√	√	√	√
EUR	LANCER(CS#,CT#)	SWS		√	√	√
EUR	LANCER(CS#,CT#)	AC	√	√	√	√
EUR	LANCER(CS#,CT#)	IMMO	√	√	√	√
EUR	LANCER(CS#,CT#)	AT		√	√	√
EUR	LANCER(CS#,CT#)	AYC/ACD		√	√	√
EUR	LANCER(CY#)	ENGINE	√	√	√	√
EUR	LANCER(CY#)	ABS	√	√	√	√
EUR	LANCER(CY#)	SRS	√	√	√	√
EUR	LANCER(CY#)	AC	√	√	√	√
EUR	LANCER(CY#)	METER	√	√	√	√
EUR	LANCER(CY#)	ETACS	√	√	√	√
EUR	LANCER(CY#)	SAS	√	√	√	√
EUR	LANCER(CY#)	IMMO	√	√	√	√
EUR	LANCER(CY#)	4WS/EPS	√	√	√	√
EUR	LANCER(CY#)	LIN	√	√	√	√
EUR	LANCER(CY#)	AUDIO	√	√	√	√
EUR	LANCER(CY#)	AYC/ACD	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	LANCER(CY#)	MULTI SELECT 4WD	√	√	√	√
EUR	LANCER(CY#)	AFS/ACL	√	√	√	√
EUR	LANCER(CY#)	AND	√	√	√	√
EUR	LANCER(CY#)	HFM	√	√	√	√
EUR	LANCER(CY#)	AT	√	√	√	√
EUR	LANCER(CY#)	AUTO CRUISE	√	√	√	√
EUR	LANCER(CY#)	SHIFT LEVER	√			
EUR	LANCER(CY#)	AS&G	√	√	√	√
EUR	LANCER(CY#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	ENGINE	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	AT	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	ABS	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	SRS	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	AC	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	METER	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	ETACS	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	SAS	√	√	√	
EUR	LANCER EVOLUTION(CZ#)	IMMO	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	AUTO CRUISE	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	AFS/ACL	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	AYC/ACD	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	AND	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	LANCER EVOLUTION(CZ#)	LIN	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	AUDIO	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	HFM	√	√	√	√
EUR	LANCER EVOLUTION(CZ#)	SHIFT LEVER	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	ENGINE	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AT	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	ABS	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	SRS	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	METER	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	ETACS	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	SAS	√	√	√	
EUR	LANCER SPORTBACK(CX#)	IMMO	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AUTO CRUISE	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	4WS/EPS	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AFS/ACL	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AYC/ACD	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AND	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	LIN	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	HFM	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	SHIFT LEVER	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AC	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AUDIO	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	AS&G	√	√	√	√
EUR	LANCER SPORTBACK(CX#)	CORNER SENSOR/BACK SENSOR	√	√	√	√



## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	LANCER WAGON	ENGINE		√	√	√
EUR	LANCER WAGON	ABS	√	√	√	√
EUR	LANCER WAGON	SRS	√	√	√	√
EUR	LANCER WAGON	SWS		√	√	√
EUR	LANCER WAGON	AC	√	√	√	√
EUR	LANCER WAGON	IMMO	√	√	√	√
EUR	LANCER WAGON	AT		√	√	√
EUR	OUTLANDER(CU#)	ENGINE		√	√	√
EUR	OUTLANDER(CU#)	ABS	√	√	√	√
EUR	OUTLANDER(CU#)	SRS	√	√	√	√
EUR	OUTLANDER(CU#)	SWS		√	√	√
EUR	OUTLANDER(CU#)	AC	√	√	√	√
EUR	OUTLANDER(CU#)	IMMO	√	√	√	√
EUR	OUTLANDER(CU#)	AT		√	√	√
EUR	OUTLANDER(CU#)	AUTO CRUISE		√	√	√
EUR	OUTLANDER(CW#)	ENGINE	√	√	√	√
EUR	OUTLANDER(CW#)	AT	√	√	√	√
EUR	OUTLANDER(CW#)	ABS	√	√	√	√
EUR	OUTLANDER(CW#)	SRS	√	√	√	√
EUR	OUTLANDER(CW#)	AC	√	√	√	√
EUR	OUTLANDER(CW#)	METER	√	√	√	√
EUR	OUTLANDER(CW#)	ETACS	√	√	√	√
EUR	OUTLANDER(CW#)	IMMO	√	√	√	√
EUR	OUTLANDER(CW#)	AUTO CRUISE	√	√	√	√
EUR	OUTLANDER(CW#)	AND	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	OUTLANDER(CW#)	LIN	√	√	√	√
EUR	OUTLANDER(CW#)	MULTI SELECT 4WD	√	√	√	√
EUR	OUTLANDER(CW#)	AUDIO	√	√	√	√
EUR	OUTLANDER(CW#)	SAS	√	√	√	√
EUR	OUTLANDER(CW#)	HFM	√	√	√	√
EUR	OUTLANDER(CW#)	AS&G	√	√	√	√
EUR	OUTLANDER(CW#)	AFS/ACL	√	√	√	√
EUR	OUTLANDER(CW#)	SHIFT LEVER	√	√	√	√
EUR	OUTLANDER(CW#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
EUR	OUTLANDER (GF#)	ENGINE	√	√	√	√
EUR	OUTLANDER (GF#)	AT	√	√	√	√
EUR	OUTLANDER (GF#)	ABS	√	√	√	√
EUR	OUTLANDER (GF#)	SRS	√	√	√	√
EUR	OUTLANDER (GF#)	AC	√	√	√	√
EUR	OUTLANDER (GF#)	METER	√	√	√	√
EUR	OUTLANDER (GF#)	ETACS	√	√	√	√
EUR	OUTLANDER (GF#)	IMMO	√	√	√	√
EUR	OUTLANDER (GF#)	AUTO CRUISE	√	√	√	√
EUR	OUTLANDER (GF#)	4WS/EPS	√	√	√	√
EUR	OUTLANDER (GF#)	SAS	√	√	√	
EUR	OUTLANDER (GF#)	LIN	√	√	√	√
EUR	OUTLANDER (GF#)	AS&G	√	√	√	√
EUR	OUTLANDER (GF#)	AWC	√	√	√	√
EUR	OUTLANDER (GF#)	OSS	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	OUTLANDER (GF#)	AND	√	√	√	√
EUR	OUTLANDER (GF#)	ACC/FCM	√	√	√	√
EUR	OUTLANDER (GF#)	AUDIO	√	√	√	√
EUR	OUTLANDER (GF#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
EUR	OUTLANDER (GF#)	Lane Keep	√	√	√	√
EUR	OUTLANDER (GF#)	Power Gate	√	√	√	√
EUR	OUTLANDER-PHEV	ENGINE	√	√	√	√
EUR	OUTLANDER-PHEV	ABS	√	√	√	√
EUR	OUTLANDER-PHEV	SRS	√	√	√	√
EUR	OUTLANDER-PHEV	AC	√	√	√	√
EUR	OUTLANDER-PHEV	METER	√	√	√	√
EUR	OUTLANDER-PHEV	ETACS	√	√	√	√
EUR	OUTLANDER-PHEV	IMMO	√	√	√	√
EUR	OUTLANDER-PHEV	4WS/EPS	√	√	√	√
EUR	OUTLANDER-PHEV	SAS	√	√	√	√
EUR	OUTLANDER-PHEV	LIN	√	√	√	√
EUR	OUTLANDER-PHEV	BMU	√	√	√	√
EUR	OUTLANDER-PHEV	EV/MiEV Remote System	√	√	√	√
EUR	OUTLANDER-PHEV	OSS	√	√	√	√
EUR	OUTLANDER-PHEV	AWC	√	√	√	√
EUR	OUTLANDER-PHEV	OSS	√	√	√	√
EUR	OUTLANDER-PHEV	AND	√	√	√	√
EUR	OUTLANDER-PHEV	ACC/FCM	√	√	√	√
EUR	OUTLANDER-PHEV	AUDIO	√	√	√	√
EUR	OUTLANDER-PHEV	CORNER SENSOR/BACK SENSOR	√	√	√	√
EUR	OUTLANDER-PHEV	Compressor	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	OUTLANDER-PHEV	F-MCU	√	√	√	√
EUR	OUTLANDER-PHEV	GCU	√	√	√	√
EUR	OUTLANDER-PHEV	Lane Keep	√	√	√	√
EUR	OUTLANDER-PHEV	OBC	√	√	√	√
EUR	OUTLANDER-PHEV	P LOCK	√	√	√	√
EUR	OUTLANDER-PHEV	Power Gate	√	√	√	√
EUR	OUTLANDER-PHEV	PHEV	√	√	√	√
EUR	OUTLANDER-PHEV	R-MCU	√	√	√	√
EUR	OUTLANDER-PHEV	CMU1	√			√
EUR	OUTLANDER-PHEV	CMU2	√			√
EUR	OUTLANDER-PHEV	CMU3	√			√
EUR	OUTLANDER-PHEV	CMU4	√			√
EUR	OUTLANDER-PHEV	CMU5	√			√
EUR	OUTLANDER-PHEV	CMU7	√			√
EUR	OUTLANDER-PHEV	CMU8	√			√
EUR	OUTLANDER-PHEV	CMU9	√			√
EUR	OUTLANDER-PHEV	CMU10	√			√
EUR	OUTLANDER-PHEV	CMU11	√			√
EUR	PAJERO / MONTERO(V6#,V7#)	ENGINE		√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	ABS	√	√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	SRS	√	√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	SWS		√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	IMMO	√	√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	SS4II		√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	HBB		√	√	

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	PAJERO / MONTERO(V6#,V7#)	AC	√	√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	AT		√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	AUTO CRUISE		√	√	√
EUR	PAJERO / MONTERO(V6#,V7#)	TCL/STABILITY CONTROL	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	ENGINE	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	AT	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	ABS	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	SRS	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	SWS		√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	AC	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	METER	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	ETACS	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	IMMO	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	AUTO CRUISE	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	SS4II		√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	DISPLAY	√	√	√	√
EUR	PAJERO / MONTERO(V8#,V9#)	HBB		√	√	
EUR	PAJERO / MONTERO(V8#,V9#)	LIN	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	ENGINE		√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	ABS	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	SRS	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	AC	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	ETACS	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	IMMO	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	AUTO CRUISE		√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
EUR	PAJERO SPORT / MONTERO SPORT(K8#,K9#)	AT		√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	ENGINE	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	AT	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	ABS	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	SRS	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	AC	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	ETACS	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	SAS	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	IMMO	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	AUTO CRUISE	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	DISPLAY	√	√	√	√
EUR	PAJERO SPORT / MONTERO SPORT(KH#)	LIN	√	√	√	√
USA	ECLIPSE	ENGINE	√	√	√	√
USA	ECLIPSE	ABS	√	√	√	√
USA	ECLIPSE	SRS	√	√	√	√
USA	ECLIPSE	SWS		√	√	√
USA	ECLIPSE	AC	√	√	√	√
USA	ECLIPSE	METER	√	√	√	√
USA	ECLIPSE	ETACS	√	√	√	
USA	ECLIPSE	IMMO	√	√	√	√
USA	ECLIPSE	AUTO CRUISE	√	√	√	√
USA	ECLIPSE	AT	√	√	√	√
USA	ECLIPSE	TCL/STABILITY CONTROL	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	ECLIPSE	TPMS	√	√	√	√
USA	ECLIPSE	SAS	√	√	√	√
USA	ECLIPSE SPYDER	ENGINE	√	√	√	√
USA	ECLIPSE SPYDER	ABS	√	√	√	√
USA	ECLIPSE SPYDER	SRS	√	√	√	√
USA	ECLIPSE SPYDER	SWS		√	√	√
USA	ECLIPSE SPYDER	AC	√	√	√	√
USA	ECLIPSE SPYDER	METER	√	√	√	√
USA	ECLIPSE SPYDER	ETACS	√	√	√	
USA	ECLIPSE SPYDER	IMMO	√	√	√	√
USA	ECLIPSE SPYDER	AUTO CRUISE	√	√	√	√
USA	ECLIPSE SPYDER	RHT/TOPSTACK	√	√	√	√
USA	ECLIPSE SPYDER	AT	√	√	√	√
USA	ECLIPSE SPYDER	TCL/STABILITY CONTROL	√	√	√	√
USA	ECLIPSE SPYDER	TPMS	√	√	√	√
USA	ECLIPSE SPYDER	SAS	√	√	√	√
USA	ENDEAVOR	ENGINE		√	√	√
USA	ENDEAVOR	AT		√	√	√
USA	ENDEAVOR	ABS	√	√	√	√
USA	ENDEAVOR	SRS	√	√	√	√
USA	ENDEAVOR	SWS		√	√	√
USA	ENDEAVOR	AC	√	√	√	√
USA	ENDEAVOR	METER	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	ENDEAVOR	ETACS	√	√	√	
USA	ENDEAVOR	IMMO	√	√	√	√
USA	ENDEAVOR	AUTO CRUISE		√	√	√
USA	ENDEAVOR	TPMS	√	√	√	√
USA	ENDEAVOR	TCL/STABILITY CONTROL	√	√	√	√
USA	ENDEAVOR	DISPLAY	√	√	√	√
USA	ENDEAVOR	SAS	√	√	√	
USA	GALANT	ENGINE	√	√	√	√
USA	GALANT	AT	√	√	√	√
USA	GALANT	ABS	√	√	√	√
USA	GALANT	SRS	√	√	√	√
USA	GALANT	SWS		√	√	√
USA	GALANT	AC	√	√	√	√
USA	GALANT	METER	√	√	√	√
USA	GALANT	ETACS	√	√	√	√
USA	GALANT	IMMO	√	√	√	√
USA	GALANT	AUTO CRUISE	√	√	√	√
USA	GALANT	TPMS	√	√	√	√
USA	GALANT	DISPLAY	√	√	√	√
USA	GALANT	TCL/STABILITY CONTROL	√	√	√	√
USA	i-MiEV	ABS	√	√	√	√
USA	i-MiEV	SRS	√	√	√	√
USA	i-MiEV	AC	√	√	√	√
USA	i-MiEV	METER	√	√	√	√



## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	i-MiEV	ETACS	√	√	√	√
USA	i-MiEV	4WS/EPS	√	√	√	√
USA	i-MiEV	LIN	√	√	√	√
USA	i-MiEV	KEYLESS OPERATION	√	√	√	√
USA	i-MiEV	EV-ECU	√	√	√	√
USA	i-MiEV	BMU	√	√	√	√
USA	i-MiEV	COMP&HTR	√	√	√	√
USA	i-MiEV	MCU	√	√	√	√
USA	i-MiEV	TPMS	√	√	√	√
USA	i-MiEV	SAS	√	√	√	
USA	i-MiEV	IMMO	√	√	√	√
USA	i-MiEV	OCM	√	√	√	√
USA	i-MiEV	CMU1	√			√
USA	i-MiEV	CMU2	√			√
USA	i-MiEV	CMU3	√			√
USA	i-MiEV	CMU4	√			√
USA	i-MiEV	CMU5	√			√
USA	i-MiEV	CMU6	√			√
USA	i-MiEV	CMU7	√			√
USA	i-MiEV	CMU8	√			√
USA	i-MiEV	CMU9	√			√
USA	i-MiEV	CMU10	√			√
USA	i-MiEV	CMU11	√			√
USA	i-MiEV	CMU12	√			√
USA	LANCER(CS#,CT#)	ENGINE		√	√	√
USA	LANCER(CS#,CT#)	ABS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	LANCER(CS#,CT#)	SRS	√	√	√	√
USA	LANCER(CS#,CT#)	SWS		√	√	√
USA	LANCER(CS#,CT#)	AUTO CRUISE		√	√	√
USA	LANCER(CS#,CT#)	AT		√	√	√
USA	LANCER(CS#,CT#)	IMMO	√	√	√	√
USA	LANCER(CS#,CT#)	AYC/ACD		√	√	√
USA	LANCER(CY#)	ENGINE	√	√	√	√
USA	LANCER(CY#)	ABS	√	√	√	√
USA	LANCER(CY#)	SRS	√	√	√	√
USA	LANCER(CY#)	AC	√	√	√	√
USA	LANCER(CY#)	METER	√	√	√	√
USA	LANCER(CY#)	ETACS	√	√	√	√
USA	LANCER(CY#)	IMMO	√	√	√	√
USA	LANCER(CY#)	LIN	√	√	√	√
USA	LANCER(CY#)	AUDIO	√	√	√	√
USA	LANCER(CY#)	OCM	√	√	√	√
USA	LANCER(CY#)	AUTO CRUISE	√	√	√	√
USA	LANCER(CY#)	AND	√	√	√	√
USA	LANCER(CY#)	HFM	√	√	√	√
USA	LANCER(CY#)	SATELLITE RADIO	√	√	√	√
USA	LANCER(CY#)	AT	√	√	√	√
USA	LANCER(CY#)	4WS/EPS	√	√	√	√
USA	LANCER(CY#)	AYC/ACD	√	√	√	√
USA	LANCER(CY#)	TPMS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	LANCER(CY#)	SAS	√	√	√	
USA	LANCER(CY#)	4WD	√	√	√	√
USA	LANCER(CY#)	SHIFT LEVER	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	ENGINE	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	AT	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	ABS	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	SRS	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	AC	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	METER	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	ETACS	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	SAS	√	√	√	
USA	LANCER EVOLUTION(CZ#)	IMMO	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	AUTO CRUISE	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	AYC/ACD	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	AND	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	LIN	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	AUDIO	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	HFM	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	OCM	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	SATELLITE RADIO	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	SHIFT LEVER	√	√	√	√
USA	LANCER EVOLUTION(CZ#)	TPMS	√	√	√	√
USA	LANCER SPORTBACK(CS#)	ENGINE		√	√	√
USA	LANCER SPORTBACK(CS#)	AT		√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	LANCER SPORTBACK(CS#)	ABS	√	√	√	√
USA	LANCER SPORTBACK(CS#)	SRS	√	√	√	√
USA	LANCER SPORTBACK(CS#)	SWS		√	√	√
USA	LANCER SPORTBACK(CX#)	ENGINE	√	√	√	√
USA	LANCER SPORTBACK(CX#)	AT	√	√	√	√
USA	LANCER SPORTBACK(CX#)	ABS	√	√	√	√
USA	LANCER SPORTBACK(CX#)	SRS	√	√	√	√
USA	LANCER SPORTBACK(CX#)	AC	√	√	√	√
USA	LANCER SPORTBACK(CX#)	METER	√	√	√	√
USA	LANCER SPORTBACK(CX#)	ETACS	√	√	√	√
USA	LANCER SPORTBACK(CX#)	SAS	√	√	√	
USA	LANCER SPORTBACK(CX#)	IMMO	√	√	√	√
USA	LANCER SPORTBACK(CX#)	AUTO CRUISE	√	√	√	√
USA	LANCER SPORTBACK(CX#)	AYC/ACD	√	√	√	√
USA	LANCER SPORTBACK(CX#)	AND	√	√	√	√
USA	LANCER SPORTBACK(CX#)	LIN	√	√	√	√
USA	LANCER SPORTBACK(CX#)	AUDIO	√	√	√	√
USA	LANCER SPORTBACK(CX#)	HFM	√	√	√	√
USA	LANCER SPORTBACK(CX#)	OCM	√	√	√	√
USA	LANCER SPORTBACK(CX#)	SATELLITE RADIO	√	√	√	√
USA	LANCER SPORTBACK(CX#)	SHIFT LEVER	√	√	√	√
USA	LANCER SPORTBACK(CX#)	4WS/EPS	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	MIRAGE	ENGINE	√	√	√	√
USA	MIRAGE	AT	√	√	√	√
USA	MIRAGE	ABS	√	√	√	√
USA	MIRAGE	SRS	√	√	√	√
USA	MIRAGE	AC	√	√	√	√
USA	MIRAGE	METER	√	√	√	√
USA	MIRAGE	TPMS	√	√	√	√
USA	MIRAGE	ETACS	√	√	√	√
USA	MIRAGE	IMMO	√	√	√	√
USA	MIRAGE	4WS/EPS	√	√	√	√
USA	MIRAGE	SAS	√	√	√	√
USA	MIRAGE	OSS	√	√	√	√
USA	MONTERO	ENGINE		√	√	√
USA	MONTERO	AT		√	√	√
USA	MONTERO	ABS	√	√	√	√
USA	MONTERO	SRS	√	√	√	√
USA	MONTERO	SWS		√	√	√
USA	MONTERO	IMMO	√	√	√	√
USA	MONTERO	AUTO CRUISE		√	√	√
USA	MONTERO	TPMS	√	√	√	√
USA	MONTERO	TCL/STABILITY CONTROL	√	√	√	√
USA	MONTERO	SS4II		√	√	√
USA	MONTERO	AC	√	√	√	√
USA	MONTERO	HBB		√	√	√
USA	OUTLANDER(CU#)	ENGINE		√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	OUTLANDER(CU#)	ABS	√	√	√	√
USA	OUTLANDER(CU#)	SRS	√	√	√	√
USA	OUTLANDER(CU#)	SWS		√	√	√
USA	OUTLANDER(CU#)	IMMO	√	√	√	√
USA	OUTLANDER(CU#)	AT		√	√	√
USA	OUTLANDER(CU#)	AUTO CRUISE		√	√	√
USA	OUTLANDER(CU#)	AC	√	√	√	√
USA	OUTLANDER(CW#)	ENGINE	√	√	√	√
USA	OUTLANDER(CW#)	AT	√	√	√	√
USA	OUTLANDER(CW#)	ABS	√	√	√	√
USA	OUTLANDER(CW#)	SRS	√	√	√	√
USA	OUTLANDER(CW#)	AC	√	√	√	√
USA	OUTLANDER(CW#)	METER	√	√	√	√
USA	OUTLANDER(CW#)	ETACS	√	√	√	√
USA	OUTLANDER(CW#)	SAS	√	√	√	
USA	OUTLANDER(CW#)	IMMO	√	√	√	√
USA	OUTLANDER(CW#)	AUTO CRUISE	√	√	√	√
USA	OUTLANDER(CW#)	AND	√	√	√	√
USA	OUTLANDER(CW#)	LIN	√	√	√	√
USA	OUTLANDER(CW#)	AUDIO	√	√	√	√
USA	OUTLANDER(CW#)	HFM	√	√	√	√
USA	OUTLANDER(CW#)	OCM	√	√	√	√
USA	OUTLANDER(CW#)	SATELLITE RADIO	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	OUTLANDER(CW#)	MULTI SELECT 4WD	√	√	√	√
USA	OUTLANDER(CW#)	TPMS	√	√	√	√
USA	OUTLANDER(CW#)	AWC	√	√	√	√
USA	OUTLANDER (GF#)	ENGINE	√	√	√	√
USA	OUTLANDER (GF#)	AT	√	√	√	√
USA	OUTLANDER (GF#)	ABS	√	√	√	√
USA	OUTLANDER (GF#)	SRS	√	√	√	√
USA	OUTLANDER (GF#)	AC	√	√	√	√
USA	OUTLANDER (GF#)	METER	√	√	√	√
USA	OUTLANDER (GF#)	ETACS	√	√	√	√
USA	OUTLANDER (GF#)	IMMO	√	√	√	√
USA	OUTLANDER (GF#)	AUTO CRUISE	√	√	√	√
USA	OUTLANDER (GF#)	4WS/EPS	√	√	√	√
USA	OUTLANDER (GF#)	SAS	√	√	√	
USA	OUTLANDER (GF#)	LIN	√	√	√	√
USA	OUTLANDER (GF#)	AS&G	√	√	√	√
USA	OUTLANDER (GF#)	AWC	√	√	√	√
USA	OUTLANDER (GF#)	OSS	√	√	√	√
USA	OUTLANDER (GF#)	AND	√	√	√	√
USA	OUTLANDER (GF#)	ACC/FCM	√	√	√	√
USA	OUTLANDER (GF#)	AUDIO	√	√	√	√
USA	OUTLANDER (GF#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
USA	OUTLANDER (GF#)	Lane Keep	√	√	√	√
USA	OUTLANDER (GF#)	Power Gate	√	√	√	√
USA	OUTLANDER SPORT / RVR	ENGINE	√	√	√	√
USA	OUTLANDER SPORT / RVR	AT	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	OUTLANDER SPORT / RVR	ABS	√	√	√	√
USA	OUTLANDER SPORT / RVR	SRS	√	√	√	√
USA	OUTLANDER SPORT / RVR	AC	√	√	√	√
USA	OUTLANDER SPORT / RVR	METER	√	√	√	√
USA	OUTLANDER SPORT / RVR	ETACS	√	√	√	√
USA	OUTLANDER SPORT / RVR	SAS	√	√	√	√
USA	OUTLANDER SPORT / RVR	IMMO	√	√	√	√
USA	OUTLANDER SPORT / RVR	AUTO CRUISE	√	√	√	√
USA	OUTLANDER SPORT / RVR	4WS/EPS	√	√	√	√
USA	OUTLANDER SPORT / RVR	AFS/ACL	√	√	√	√
USA	OUTLANDER SPORT / RVR	AND/LIN	√	√	√	√
USA	OUTLANDER SPORT / RVR	MULTI SELECT 4WD	√	√	√	√
USA	OUTLANDER SPORT / RVR	AUDIO	√	√	√	√
USA	OUTLANDER SPORT / RVR	OSS	√	√	√	√
USA	OUTLANDER SPORT / RVR	CORNER SENSOR/BACK SENSOR	√	√	√	√
USA	OUTLANDER SPORT / RVR	4WD	√	√	√	√
USA	RAIDER	ENGINE	√	√	√	√
USA	RAIDER	AT	√	√	√	√
USA	RAIDER	ABS	√	√	√	√
USA	RAIDER	METER	√	√	√	√
USA	RAIDER	KOS/IMMO/KEYLESS	√	√	√	√
USA	RAIDER	ETACS	√	√	√	√
USA	RAIDER	HFM	√	√	√	√
USA	RAIDER	AIR Conditioner	√	√	√	√



## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
USA	RAIDER	OCM	√	√	√	√
USA	RAIDER	SRS-ATR bag	√	√	√	√
USA	RAIDER	Audio	√	√	√	√
AUSTRALIA	380	ENGINE	√	√	√	√
AUSTRALIA	380	ABS	√	√	√	√
AUSTRALIA	380	SRS	√	√	√	√
AUSTRALIA	380	SWS		√	√	√
AUSTRALIA	380	AC	√	√	√	√
AUSTRALIA	380	METER	√	√	√	√
AUSTRALIA	380	ETACS	√	√	√	
AUSTRALIA	380	IMMO	√	√	√	√
AUSTRALIA	380	AUTO CRUISE	√	√	√	√
AUSTRALIA	380	TCL/STABILITY CONTROL	√	√	√	√
AUSTRALIA	380	DISPLAY	√	√	√	√
AUSTRALIA	380	AT	√	√	√	√
AUSTRALIA	ASX	ENGINE	√	√	√	√
AUSTRALIA	ASX	AT	√	√	√	√
AUSTRALIA	ASX	ABS	√	√	√	√
AUSTRALIA	ASX	SRS	√	√	√	√
AUSTRALIA	ASX	AC	√	√	√	√
AUSTRALIA	ASX	METER	√	√	√	√
AUSTRALIA	ASX	ETACS	√	√	√	√
AUSTRALIA	ASX	SAS	√	√	√	√
AUSTRALIA	ASX	IMMO	√	√	√	√
AUSTRALIA	ASX	AUTO CRUISE	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	ASX	4WS/EPS	√	√	√	√
AUSTRALIA	ASX	AFS/ACL	√	√	√	√
AUSTRALIA	ASX	AND/LIN	√	√	√	√
AUSTRALIA	ASX	MULTI SELECT 4WD	√	√	√	√
AUSTRALIA	ASX	AUDIO	√	√	√	√
AUSTRALIA	ASX	OSS	√	√	√	√
AUSTRALIA	ASX	CORNER SENSOR/BACK SENSOR	√	√	√	√
AUSTRALIA	ASX	4WD	√	√	√	√
AUSTRALIA	CHALLENGER(k9#)	ENGINE		√	√	√
AUSTRALIA	CHALLENGER(k9#)	ABS	√	√	√	√
AUSTRALIA	CHALLENGER(k9#)	SRS	√	√	√	√
AUSTRALIA	CHALLENGER(k9#)	ETACS	√	√	√	√
AUSTRALIA	CHALLENGER(k9#)	IMMO	√	√	√	√
AUSTRALIA	CHALLENGER(k9#)	AUTO CRUISE		√	√	√
AUSTRALIA	CHALLENGER(k9#)	AT		√	√	√
AUSTRALIA	CHALLENGER(kH#)	ENGINE	√	√	√	√
AUSTRALIA	CHALLENGER(kH#)	ABS	√	√	√	√
AUSTRALIA	CHALLENGER(kH#)	SRS	√	√	√	√
AUSTRALIA	CHALLENGER(kH#)	ETACS	√	√	√	√
AUSTRALIA	CHALLENGER(kH#)	IMMO	√	√	√	√
AUSTRALIA	CHALLENGER(kH#)	LIN	√	√	√	√
AUSTRALIA	CHALLENGER(kH#)	DISPLAY	√	√	√	√
AUSTRALIA	CHALLENGER(kH#)	AC	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	CHALLENGER(kH#)	SAS	√	√	√	
AUSTRALIA	CHALLENGER(kH#)	AT	√	√	√	√
AUSTRALIA	COLT	ENGINE		√	√	√
AUSTRALIA	COLT	ABS	√	√	√	√
AUSTRALIA	COLT	SRS	√	√	√	√
AUSTRALIA	COLT	SWS		√	√	√
AUSTRALIA	COLT	AC	√	√	√	√
AUSTRALIA	COLT	METER	√	√	√	√
AUSTRALIA	COLT	ETACS	√	√	√	√
AUSTRALIA	COLT	IMMO	√	√	√	√
AUSTRALIA	COLT	4WS/EPS	√	√	√	√
AUSTRALIA	COLT	AT		√	√	√
AUSTRALIA	COLT CABRIOLET	ENGINE	√	√	√	√
AUSTRALIA	COLT CABRIOLET	ABS	√	√	√	√
AUSTRALIA	COLT CABRIOLET	SRS	√	√	√	√
AUSTRALIA	COLT CABRIOLET	AC	√	√	√	√
AUSTRALIA	COLT CABRIOLET	METER	√	√	√	√
AUSTRALIA	COLT CABRIOLET	ETACS	√	√	√	√
AUSTRALIA	COLT CABRIOLET	IMMO	√	√	√	√
AUSTRALIA	COLT CABRIOLET	4WS/EPS	√	√	√	√
AUSTRALIA	COLT CABRIOLET	DISPLAY	√	√	√	√
AUSTRALIA	COLT CABRIOLET	RHT/TOPSTACK	√	√	√	√
AUSTRALIA	EXPRESS(PB#)	ENGINE		√	√	√
AUSTRALIA	EXPRESS(PB#)	ABS	√	√	√	√
AUSTRALIA	EXPRESS(PB#)	SRS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	EXPRESS(PB#)	ETACS	√	√	√	√
AUSTRALIA	EXPRESS(PB#)	IMMO	√	√	√	√
AUSTRALIA	EXPRESS / STAR WAGON(P0#,P1#)	ENGINE		√	√	√
AUSTRALIA	GRANDIS	ENGINE		√	√	√
AUSTRALIA	GRANDIS	AT		√	√	√
AUSTRALIA	GRANDIS	ABS	√	√	√	√
AUSTRALIA	GRANDIS	SRS	√	√	√	√
AUSTRALIA	GRANDIS	SWS		√	√	√
AUSTRALIA	GRANDIS	AC	√	√	√	√
AUSTRALIA	GRANDIS	METER	√	√	√	√
AUSTRALIA	GRANDIS	ETACS	√	√	√	√
AUSTRALIA	GRANDIS	IMMO	√	√	√	√
AUSTRALIA	GRANDIS	AUTO CRUISE		√	√	√
AUSTRALIA	i-MiEV	ABS	√	√	√	√
AUSTRALIA	i-MiEV	SRS	√	√	√	√
AUSTRALIA	i-MiEV	AC	√	√	√	√
AUSTRALIA	i-MiEV	METER	√	√	√	√
AUSTRALIA	i-MiEV	ETACS	√	√	√	√
AUSTRALIA	i-MiEV	4WS/EPS	√	√	√	√
AUSTRALIA	i-MiEV	LIN	√	√	√	√
AUSTRALIA	i-MiEV	KEYLESS OPERATION	√	√	√	√
AUSTRALIA	i-MiEV	EV-ECU	√	√	√	√
AUSTRALIA	i-MiEV	BMU	√	√	√	√
AUSTRALIA	i-MiEV	COMP&HTR	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	i-MiEV	MCU	√	√	√	√
AUSTRALIA	i-MiEV	SAS	√	√	√	
AUSTRALIA	i-MiEV	CMU1	√			√
AUSTRALIA	i-MiEV	CMU2	√			√
AUSTRALIA	i-MiEV	CMU3	√			√
AUSTRALIA	i-MiEV	CMU4	√			√
AUSTRALIA	i-MiEV	CMU5	√			√
AUSTRALIA	i-MiEV	CMU6	√			√
AUSTRALIA	i-MiEV	CMU7	√			√
AUSTRALIA	i-MiEV	CMU8	√			√
AUSTRALIA	i-MiEV	CMU9	√			√
AUSTRALIA	i-MiEV	CMU10	√			√
AUSTRALIA	i-MiEV	CMU11	√			√
AUSTRALIA	i-MiEV	CMU12	√			√
AUSTRALIA	LANCER(CY#)	ENGINE	√	√	√	√
AUSTRALIA	LANCER(CY#)	ABS	√	√	√	√
AUSTRALIA	LANCER(CY#)	SRS	√	√	√	√
AUSTRALIA	LANCER(CY#)	AC	√	√	√	√
AUSTRALIA	LANCER(CY#)	METER	√	√	√	√
AUSTRALIA	LANCER(CY#)	ETACS	√	√	√	√
AUSTRALIA	LANCER(CY#)	SAS	√	√	√	
AUSTRALIA	LANCER(CY#)	IMMO	√	√	√	√
AUSTRALIA	LANCER(CY#)	AUTO CRUISE	√	√	√	√
AUSTRALIA	LANCER(CY#)	LIN	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	LANCER(CY#)	AUDIO	√	√	√	√
AUSTRALIA	LANCER(CY#)	HFM	√	√	√	√
AUSTRALIA	LANCER(CY#)	AT	√	√	√	√
AUSTRALIA	LANCER(CY#)	AFS/ACL	√	√	√	√
AUSTRALIA	LANCER(CY#)	4WS/EPS	√	√	√	√
AUSTRALIA	LANCER(CY#)	AYC/ACD	√	√	√	√
AUSTRALIA	LANCER(CY#)	AND	√	√	√	
AUSTRALIA	LANCER(CY#)	SHIFT LEVER	√	√	√	√
AUSTRALIA	LANCER(CY#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	ENGINE	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	AT	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	ABS	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	SRS	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	SHIFT LEVER	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	AC	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	METER	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	ETACS	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	SAS	√	√	√	
AUSTRALIA	LANCER EVOLUTION(CZ#)	IMMO	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	AUTO CRUISE	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	AFS/ACL	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	AYC/ACD	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	AND	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	LIN	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	LANCER EVOLUTION(CZ#)	AUDIO	√	√	√	√
AUSTRALIA	LANCER EVOLUTION(CZ#)	HFM	√	√	√	√
AUSTRALIA	LANCER SEDAN	ENGINE		√	√	√
AUSTRALIA	LANCER SEDAN	ABS	√	√	√	√
AUSTRALIA	LANCER SEDAN	SRS	√	√	√	√
AUSTRALIA	LANCER SEDAN	SWS		√	√	√
AUSTRALIA	LANCER SEDAN	IMMO	√	√	√	√
AUSTRALIA	LANCER SEDAN	AUTO CRUISE		√	√	√
AUSTRALIA	LANCER SEDAN	AT		√	√	√
AUSTRALIA	LANCER SEDAN	AC	√	√	√	√
AUSTRALIA	LANCER SEDAN	AYC/ACD		√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	ENGINE	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	AT	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	ABS	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	SRS	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	SHIFT LEVER	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	AC	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	METER	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	ETACS	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	SAS	√	√	√	
AUSTRALIA	LANCER SPOTBACK(CX#)	IMMO	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	AUTO CRUISE	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	AFS/ACL	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	AYC/ACD	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	AND	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	LANCER SPOTBACK(CX#)	LIN	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	AUDIO	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	HFM	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	4WS/EPS	√	√	√	√
AUSTRALIA	LANCER SPOTBACK(CX#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
AUSTRALIA	LANCER WAGON	ENGINE		√	√	√
AUSTRALIA	LANCER WAGON	ABS	√	√	√	√
AUSTRALIA	LANCER WAGON	SRS	√	√	√	√
AUSTRALIA	LANCER WAGON	SWS		√	√	√
AUSTRALIA	LANCER WAGON	AC	√	√	√	√
AUSTRALIA	LANCER WAGON	IMMO	√	√	√	√
AUSTRALIA	LANCER WAGON	AUTO CRUISE		√	√	√
AUSTRALIA	LANCER WAGON	AT		√	√	√
AUSTRALIA	MIRAGE	ENGINE	√	√	√	√
AUSTRALIA	MIRAGE	AT	√	√	√	√
AUSTRALIA	MIRAGE	ABS	√	√	√	√
AUSTRALIA	MIRAGE	SRS	√	√	√	√
AUSTRALIA	MIRAGE	AC	√	√	√	√
AUSTRALIA	MIRAGE	METER	√	√	√	√
AUSTRALIA	MIRAGE	TPMS	√	√	√	√
AUSTRALIA	MIRAGE	ETACS	√	√	√	√
AUSTRALIA	MIRAGE	IMMO	√	√	√	√
AUSTRALIA	MIRAGE	4WS/EPS	√	√	√	√
AUSTRALIA	MIRAGE	SAS	√	√	√	√



## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
<b>AUSTRALIA</b>	<b>MIRAGE</b>	<b>OSS</b>	√	√	√	√
AUSTRALIA	OUTLANDER(CU#)	ENGINE		√	√	√
AUSTRALIA	OUTLANDER(CU#)	AT		√	√	√
AUSTRALIA	OUTLANDER(CU#)	ABS	√	√	√	√
AUSTRALIA	OUTLANDER(CU#)	SRS	√	√	√	√
AUSTRALIA	OUTLANDER(CU#)	SWS		√	√	√
AUSTRALIA	OUTLANDER(CU#)	AC	√	√	√	√
AUSTRALIA	OUTLANDER(CU#)	IMMO	√	√	√	√
AUSTRALIA	OUTLANDER(CU#)	AUTO CRUISE		√	√	√
AUSTRALIA	OUTLANDER(CW#)	ENGINE	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	AT	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	ABS	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	SRS	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	AC	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	METER	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	ETACS	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	IMMO	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	AUTO CRUISE	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	AFS/ACL	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	AND	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	LIN	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	MULTI SELECT 4WD	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	AUDIO	√	√	√	√
AUSTRALIA	OUTLANDER(CW#)	SAS	√	√	√	
AUSTRALIA	OUTLANDER(CW#)	HFM	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	OUTLANDER(CW#)	4WD	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	ENGINE	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	AT	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	ABS	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	SRS	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	AC	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	METER	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	ETACS	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	IMMO	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	AUTO CRUISE	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	4WS/EPS	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	SAS	√	√	√	
AUSTRALIA	OUTLANDER (GF#)	LIN	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	AS&G	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	AWC	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	OSS	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	AND	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	ACC/FCM	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	AUDIO	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	Lane Keep	√	√	√	√
AUSTRALIA	OUTLANDER (GF#)	Power Gate	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	ENGINE	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	ABS	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	SRS	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	AC	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	OUTLANDER-PHEV	METER	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	ETACS	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	IMMO	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	4WS/EPS	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	SAS	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	LIN	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	BMU	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	EV/MiEV Remote System	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	OSS	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	AWC	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	OSS	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	AND	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	ACC/FCM	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	AUDIO	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	CORNER SENSOR/BACK SENSOR	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	Compressor	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	F-MCU	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	GCU	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	Lane Keep	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	OBC	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	P LOCK	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	Power Gate	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	PHEV	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	R-MCU	√	√	√	√
AUSTRALIA	OUTLANDER-PHEV	CMU1	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU2	√			√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	OUTLANDER-PHEV	CMU3	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU4	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU5	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU7	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU8	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU9	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU10	√			√
AUSTRALIA	OUTLANDER-PHEV	CMU11	√			√
AUSTRALIA	PAJERO(V6#,V7#)	ENGINE		√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	ABS	√	√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	SRS	√	√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	SWS		√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	IMMO	√	√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	AUTO CRUISE		√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	TCL/STABILITY CONTROL	√	√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	SS4II		√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	AC	√	√	√	√
AUSTRALIA	PAJERO(V6#,V7#)	AT		√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	ENGINE	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	AT	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	ABS	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	SRS	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	SWS		√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	AC	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	METER	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
AUSTRALIA	PAJERO(V8#,V9#)	ETACS	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	IMMO	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	AUTO CRUISE	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	SS4II		√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	DISPLAY	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	LIN	√	√	√	√
AUSTRALIA	PAJERO(V8#,V9#)	CAN/LIN/SWS converter	√	√	√	√
AUSTRALIA	TRITON(K6#,K7#)	ENGINE		√	√	√
AUSTRALIA	TRITON(K6#,K7#)	IMMO	√	√	√	√
AUSTRALIA	TRITON(K6#,K7#)	ETACS	√	√	√	√
AUSTRALIA	TRITON(K6#,K7#)	ABS	√	√	√	√
AUSTRALIA	TRITON(K6#,K7#)	SRS	√	√	√	√
AUSTRALIA	TRITON(K6#,K7#)	AT		√	√	√
AUSTRALIA	TRITON(KA#,KB#)	ENGINE	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	ABS	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	SRS	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	ETACS	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	IMMO	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	AT	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	AC	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	LIN	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	DISPLAY	√	√	√	√
AUSTRALIA	TRITON(KA#,KB#)	SAS	√	√	√	
GENERAL	380	ENGINE	√	√	√	√
GENERAL	380	ABS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	380	SRS	√	√	√	√
GENERAL	380	SWS		√	√	√
GENERAL	380	AC	√	√	√	√
GENERAL	380	METER	√	√	√	√
GENERAL	380	ETACS	√	√	√	
GENERAL	380	IMMO	√	√	√	√
GENERAL	380	AUTO CRUISE	√	√	√	√
GENERAL	380	TCL/STABILITY CONTROL	√	√	√	√
GENERAL	380	DISPLAY	√	√	√	√
GENERAL	380	AT	√	√	√	√
GENERAL	ADVENTURE	ENGINE	√	√	√	√
GENERAL	ADVENTURE	AT	√	√	√	√
GENERAL	ASX	ENGINE	√	√	√	√
GENERAL	ASX	AT	√	√	√	√
GENERAL	ASX	ABS	√	√	√	√
GENERAL	ASX	SRS	√	√	√	√
GENERAL	ASX	AC	√	√	√	√
GENERAL	ASX	METER	√	√	√	√
GENERAL	ASX	ETACS	√	√	√	√
GENERAL	ASX	SAS	√	√	√	√
GENERAL	ASX	IMMO	√	√	√	√
GENERAL	ASX	AUTO CRUISE	√	√	√	√
GENERAL	ASX	4WS/EPS	√	√	√	√
GENERAL	ASX	AFS/ACL	√	√	√	√
GENERAL	ASX	AND	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	ASX	LIN	√	√	√	√
GENERAL	ASX	MULTI SELECT 4WD	√	√	√	√
GENERAL	ASX	AUDIO	√	√	√	√
GENERAL	ASX	CORNER SENSOR/BACK SENSOR	√	√	√	√
GENERAL	ASX	4WD	√	√	√	√
GENERAL	ASX	OCM	√	√	√	√
GENERAL	ASX	OSS	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	ENGINE	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	AT	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	ABS	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	SRS	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	AC	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	METER	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	TPMS	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	ETACS	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	IMMO	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	4WS/EPS	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	SAS	√	√	√	√
GENERAL	ATTRAGE / MIRAGE G4	OSS	√	√	√	√
GENERAL	CHARIOT	ENGINE		√	√	√
GENERAL	CHARIOT	AT		√	√	√
GENERAL	CHARIOT	ABS	√	√	√	√
GENERAL	CHARIOT	SWS		√	√	√
GENERAL	CHARIOT	AC	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	CHARIOT	IMMO	√	√	√	√
GENERAL	CHARIOT	SRS	√	√	√	√
GENERAL	COLT CABRIOLET	ENGINE	√	√	√	√
GENERAL	COLT CABRIOLET	ABS	√	√	√	√
GENERAL	COLT CABRIOLET	SRS	√	√	√	√
GENERAL	COLT CABRIOLET	AC	√	√	√	√
GENERAL	COLT CABRIOLET	METER	√	√	√	√
GENERAL	COLT CABRIOLET	ETACS	√	√	√	√
GENERAL	COLT CABRIOLET	IMMO	√	√	√	√
GENERAL	COLT CABRIOLET	4WS/EPS	√	√	√	√
GENERAL	COLT CABRIOLET	DISPLAY	√	√	√	√
GENERAL	COLT CABRIOLET	RHT/TOPSTACK	√	√	√	√
GENERAL	COLT T120SS	ENGINE		√	√	√
GENERAL	COLT/COLT PLUS	ENGINE		√	√	√
GENERAL	COLT/COLT PLUS	ABS	√	√	√	√
GENERAL	COLT/COLT PLUS	SRS	√	√	√	√
GENERAL	COLT/COLT PLUS	SWS		√	√	√
GENERAL	COLT/COLT PLUS	AC	√	√	√	√
GENERAL	COLT/COLT PLUS	METER	√	√	√	√
GENERAL	COLT/COLT PLUS	ETACS	√	√	√	√
GENERAL	COLT/COLT PLUS	IMMO	√	√	√	√
GENERAL	COLT/COLT PLUS	4WS/EPS	√	√	√	√
GENERAL	COLT/COLT PLUS	AT		√	√	√
GENERAL	COLT/COLT PLUS	POWER GATE	√	√	√	
GENERAL	DELICA D:5	ENGINE	√	√	√	√



## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	DELICA D:5	AT	√	√	√	√
GENERAL	DELICA D:5	ABS	√	√	√	√
GENERAL	DELICA D:5	SRS	√	√	√	√
GENERAL	DELICA D:5	AC	√	√	√	√
GENERAL	DELICA D:5	METER	√	√	√	√
GENERAL	DELICA D:5	ETACS	√	√	√	√
GENERAL	DELICA D:5	SAS	√	√	√	
GENERAL	DELICA D:5	IMMO	√	√	√	√
GENERAL	DELICA D:5	AUTO CRUISE	√	√	√	√
GENERAL	DELICA D:5	AFS/ACL	√	√	√	√
GENERAL	DELICA D:5	POWER GATE	√	√	√	√
GENERAL	DELICA D:5	LIN	√	√	√	√
GENERAL	DELICA D:5	ELECTRIC SLIDE DOOR R	√	√	√	√
GENERAL	DELICA D:5	ELECTRIC SLIDE DOOR L	√	√	√	√
GENERAL	DELICA PICK UP	ENGINE		√	√	√
GENERAL	DION	ENGINE		√	√	√
GENERAL	DION	ABS	√	√	√	√
GENERAL	DION	SRS	√	√	√	√
GENERAL	DION	SWS		√	√	√
GENERAL	DION	IMMO	√	√	√	√
GENERAL	DION	AC	√	√	√	√
GENERAL	ECLIPSE	ENGINE	√	√	√	√
GENERAL	ECLIPSE	AT	√	√	√	√
GENERAL	ECLIPSE	ABS	√	√	√	√
GENERAL	ECLIPSE	SRS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	ECLIPSE	SWS	√	√	√	√
GENERAL	ECLIPSE	AC	√	√	√	√
GENERAL	ECLIPSE	METER	√	√	√	√
GENERAL	ECLIPSE	ETACS	√	√	√	
GENERAL	ECLIPSE	SAS	√	√	√	
GENERAL	ECLIPSE	IMMO	√	√	√	√
GENERAL	ECLIPSE	AUTO CRUISE	√	√	√	√
GENERAL	EXPRESS(PB#)	ENGINE		√	√	√
GENERAL	EXPRESS(PB#)	ABS	√	√	√	√
GENERAL	EXPRESS(PB#)	SRS	√	√	√	√
GENERAL	EXPRESS(PB#)	ETACS	√	√	√	√
GENERAL	EXPRESS(PB#)	IMMO	√	√	√	√
GENERAL	GALANT(DJ#)	ENGINE		√	√	√
GENERAL	GALANT(DJ#)	AT	√	√	√	√
GENERAL	GALANT(DJ#)	ABS	√	√	√	√
GENERAL	GALANT(DJ#)	SRS	√	√	√	√
GENERAL	GALANT(DJ#)	SWS		√	√	√
GENERAL	GALANT(DJ#)	AC	√	√	√	√
GENERAL	GALANT(DJ#)	METER	√	√	√	√
GENERAL	GALANT(DJ#)	ETACS	√	√	√	
GENERAL	GALANT(DJ#)	IMMO	√	√	√	√
GENERAL	GALANT(DJ#)	AUTO CRUISE	√	√	√	√
GENERAL	GALANT(DJ#)	TCL/STABILITY CONTROL	√	√	√	√
GENERAL	GALANT(DJ#)	DISPLAY	√	√	√	√
GENERAL	GALANT(DJ#)	SAS	√	√	√	

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	GALANT(EA#)	ENGINE		√	√	√
GENERAL	GALANT(EA#)	ABS	√	√	√	√
GENERAL	GALANT(EA#)	SRS	√	√	√	√
GENERAL	GALANT(EA#)	ETACS	√	√	√	√
GENERAL	GALANT(EA#)	IMMO	√	√	√	√
GENERAL	GALANT(EA#)	AC	√	√	√	√
GENERAL	GALANT(EA#)	AT		√	√	√
GENERAL	GALANT(EA#)	AUTO CRUISE		√	√	√
GENERAL	GALANT(EA#)	TCL/STABILITY CONTROL	√	√	√	√
GENERAL	GRANDIS	ENGINE		√	√	√
GENERAL	GRANDIS	ABS	√	√	√	√
GENERAL	GRANDIS	SRS	√	√	√	√
GENERAL	GRANDIS	SWS		√	√	√
GENERAL	GRANDIS	AC	√	√	√	√
GENERAL	GRANDIS	METER	√	√	√	√
GENERAL	GRANDIS	ETACS	√	√	√	√
GENERAL	GRANDIS	IMMO	√	√	√	√
GENERAL	GRANDIS	AT		√	√	√
GENERAL	GRANDIS	AUTO CRUISE	√	√	√	√
GENERAL	GRANDIS	KEYLESS OPERATION	√	√	√	√
GENERAL	GRANDIS	SAS	√	√	√	√
GENERAL	GRANDIS	DISPLAY	√	√	√	√
GENERAL	GRANDIS	POWER GATE	√	√	√	
GENERAL	I	ENGINE	√	√	√	√
GENERAL	I	AT	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	I	ABS	√	√	√	√
GENERAL	I	SRS	√	√	√	√
GENERAL	I	AC	√	√	√	√
GENERAL	I	METER	√	√	√	√
GENERAL	I	ETACS	√	√	√	√
GENERAL	I	4WS/EPS	√	√	√	√
GENERAL	I	LIN	√	√	√	√
GENERAL	I	KEYLESS OPERATION	√	√	√	√
GENERAL	i-MiEV	ABS	√	√	√	√
GENERAL	i-MiEV	SRS	√	√	√	√
GENERAL	i-MiEV	AC	√	√	√	√
GENERAL	i-MiEV	METER	√	√	√	√
GENERAL	i-MiEV	ETACS	√	√	√	√
GENERAL	i-MiEV	SAS	√	√	√	
GENERAL	i-MiEV	IMMO	√	√	√	√
GENERAL	i-MiEV	4WS/EPS	√	√	√	√
GENERAL	i-MiEV	LIN	√	√	√	√
GENERAL	i-MiEV	KEYLESS OPERATION	√	√	√	√
GENERAL	i-MiEV	EV-ECU	√	√	√	√
GENERAL	i-MiEV	BMU	√	√	√	√
GENERAL	i-MiEV	COMP&HTR	√	√	√	√
GENERAL	i-MiEV	MCU	√	√	√	√
GENERAL	i-MiEV	CMU1	√			√
GENERAL	i-MiEV	CMU2	√			√
GENERAL	i-MiEV	CMU3	√			√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	i-MiEV	CMU4	√			√
GENERAL	i-MiEV	CMU5	√			√
GENERAL	i-MiEV	CMU6	√			√
GENERAL	i-MiEV	CMU7	√			√
GENERAL	i-MiEV	CMU8	√			√
GENERAL	i-MiEV	CMU9	√			√
GENERAL	i-MiEV	CMU10	√			√
GENERAL	i-MiEV	CMU11	√			√
GENERAL	i-MiEV	CMU12	√			√
GENERAL	L200	ENGINE		√	√	√
GENERAL	L200	ABS	√	√	√	√
GENERAL	L200	SRS	√	√	√	√
GENERAL	L200	ETACS	√	√	√	√
GENERAL	L200	IMMO	√	√	√	√
GENERAL	L200	AT		√	√	√
GENERAL	L300/DELICA WAGON	ENGINE	√	√	√	√
GENERAL	LANCER(CK#)	ENGINE		√	√	√
GENERAL	LANCER(CK#)	ABS	√	√	√	√
GENERAL	LANCER(CK#)	SWS		√	√	√
GENERAL	LANCER(CK#)	SRS	√	√	√	√
GENERAL	LANCER(CK#)	AT		√	√	√
GENERAL	LANCER(CS#,CT#)	ENGINE		√	√	√
GENERAL	LANCER(CS#,CT#)	SWS		√	√	√
GENERAL	LANCER(CS#,CT#)	ABS	√	√	√	√
GENERAL	LANCER(CS#,CT#)	SRS	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	LANCER(CS#,CT#)	IMMO	√	√	√	√
GENERAL	LANCER(CS#,CT#)	AT		√	√	√
GENERAL	LANCER(CS#,CT#)	AC	√	√	√	√
GENERAL	LANCER(CS#,CT#)	AUTO CRUISE	√	√	√	√
GENERAL	LANCER(CS#,CT#)	AYC/ACD		√	√	√
GENERAL	LANCER/LANCER EX(CY#)	ENGINE	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	ABS	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	SRS	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	AC	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	METER	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	ETACS	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	SAS	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	IMMO	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	4WS/EPS	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	AFS/ACL	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	LIN	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	AUDIO	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	AT	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	AUTO CRUISE	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	HFM	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	AYC/ACD	√	√	√	√
GENERAL	LANCER/LANCER EX(CY#)	AND	√	√	√	
GENERAL	LANCER EVOLUTION (CZ#)	ENGINE	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	AT	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	ABS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	LANCER EVOLUTION (CZ#)	SRS	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	AC	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	METER	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	ETACS	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	SAS	√	√	√	
GENERAL	LANCER EVOLUTION (CZ#)	IMMO	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	AUTO CRUISE	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	AFS/ACL	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	AYC/ACD	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	AND	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	LIN	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	AUDIO	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	HFM	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	OCM	√	√	√	√
GENERAL	LANCER EVOLUTION (CZ#)	SHIFT LEVER	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	ENGINE	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	AT	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	ABS	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	SRS	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	AC	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	METER	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	ETACS	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	SAS	√	√	√	
GENERAL	LANCER SPORTBACK (CX#)	IMMO	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	AUTO CRUISE	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	LANCER SPORTBACK (CX#)	AFS/ACL	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	AYC/ACD	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	AND	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	LIN	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	AUDIO	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	HFM	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	SHIFT LEVER	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	4WS/EPS	√	√	√	√
GENERAL	LANCER SPORTBACK (CX#)	AFS/ACL	√	√	√	√
GENERAL	LANCER WAGON	ENGINE		√	√	√
GENERAL	LANCER WAGON	ABS	√	√	√	√
GENERAL	LANCER WAGON	SRS	√	√	√	√
GENERAL	LANCER WAGON	SWS		√	√	√
GENERAL	LANCER WAGON	AC	√	√	√	√
GENERAL	LANCER WAGON	IMMO	√	√	√	√
GENERAL	LANCER WAGON	AUTO CRUISE		√	√	√
GENERAL	LANCER WAGON	AT		√	√	√
GENERAL	MAVEN	ENGINE		√	√	√
GENERAL	OUTLANDER(CU#)	ENGINE		√	√	√
GENERAL	OUTLANDER(CU#)	ABS	√	√	√	√
GENERAL	OUTLANDER(CU#)	SRS	√	√	√	√
GENERAL	OUTLANDER(CU#)	SWS		√	√	√
GENERAL	OUTLANDER(CU#)	AT		√	√	√
GENERAL	OUTLANDER(CU#)	AC	√	√	√	√
GENERAL	OUTLANDER(CU#)	AUTO CRUISE		√	√	√



## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	OUTLANDER(CU#)	IMMO	√	√	√	√
GENERAL	OUTLANDER (GF#)	ENGINE	√	√	√	√
GENERAL	OUTLANDER (GF#)	AT	√	√	√	√
GENERAL	OUTLANDER (GF#)	ABS	√	√	√	√
GENERAL	OUTLANDER (GF#)	SRS	√	√	√	√
GENERAL	OUTLANDER (GF#)	AC	√	√	√	√
GENERAL	OUTLANDER (GF#)	METER	√	√	√	√
GENERAL	OUTLANDER (GF#)	ETACS	√	√	√	√
GENERAL	OUTLANDER (GF#)	IMMO	√	√	√	√
GENERAL	OUTLANDER (GF#)	AUTO CRUISE	√	√	√	√
GENERAL	OUTLANDER (GF#)	4WS/EPS	√	√	√	√
GENERAL	OUTLANDER (GF#)	SAS	√	√	√	
GENERAL	OUTLANDER (GF#)	LIN	√	√	√	√
GENERAL	OUTLANDER (GF#)	AS&G	√	√	√	√
GENERAL	OUTLANDER (GF#)	AWC	√	√	√	√
GENERAL	OUTLANDER (GF#)	OSS	√	√	√	√
GENERAL	OUTLANDER (GF#)	AND	√	√	√	√
GENERAL	OUTLANDER (GF#)	ACC/FCM	√	√	√	√
GENERAL	OUTLANDER (GF#)	AUDIO	√	√	√	√
GENERAL	OUTLANDER (GF#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
GENERAL	OUTLANDER (GF#)	Lane Keep	√	√	√	√
GENERAL	OUTLANDER (GF#)	Power Gate	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	ENGINE	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	AT	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	ABS	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	SRS	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	AC	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	METER	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	ETACS	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	SAS	√	√	√	
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	IMMO	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	AND	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	LIN	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	MULTI SELECT 4WD	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	AUDIO	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	AUTO CRUISE	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	4WD	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	OCM	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	HFM	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	AFS/ACL	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	AWC	√	√	√	√
GENERAL	OUTLANDER(CW#)/OUTLANDER EX(CW#)	CORNER SENSOR/BACK SENSOR	√	√	√	√
GENERAL	OUTLANDER-PHEV	ENGINE	√	√	√	√
GENERAL	OUTLANDER-PHEV	ABS	√	√	√	√
GENERAL	OUTLANDER-PHEV	SRS	√	√	√	√
GENERAL	OUTLANDER-PHEV	AC	√	√	√	√
GENERAL	OUTLANDER-PHEV	METER	√	√	√	√
GENERAL	OUTLANDER-PHEV	ETACS	√	√	√	√
GENERAL	OUTLANDER-PHEV	IMMO	√	√	√	√
GENERAL	OUTLANDER-PHEV	4WS/EPS	√	√	√	√

## Mitsubishi V11.20 Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	OUTLANDER-PHEV	SAS	√	√	√	√
GENERAL	OUTLANDER-PHEV	LIN	√	√	√	√
GENERAL	OUTLANDER-PHEV	BMU	√	√	√	√
GENERAL	OUTLANDER-PHEV	EV/MiEV Remote System	√	√	√	√
GENERAL	OUTLANDER-PHEV	OSS	√	√	√	√
GENERAL	OUTLANDER-PHEV	AWC	√	√	√	√
GENERAL	OUTLANDER-PHEV	OSS	√	√	√	√
GENERAL	OUTLANDER-PHEV	AND	√	√	√	√
GENERAL	OUTLANDER-PHEV	ACC/FCM	√	√	√	√
GENERAL	OUTLANDER-PHEV	AUDIO	√	√	√	√
GENERAL	OUTLANDER-PHEV	CORNER SENSOR/BACK SENSOR	√	√	√	√
GENERAL	OUTLANDER-PHEV	Compressor	√	√	√	√
GENERAL	OUTLANDER-PHEV	F-MCU	√	√	√	√
GENERAL	OUTLANDER-PHEV	GCU	√	√	√	√
GENERAL	OUTLANDER-PHEV	Lane Keep	√	√	√	√
GENERAL	OUTLANDER-PHEV	OBC	√	√	√	√
GENERAL	OUTLANDER-PHEV	P LOCK	√	√	√	√
GENERAL	OUTLANDER-PHEV	Power Gate	√	√	√	√
GENERAL	OUTLANDER-PHEV	PHEV	√	√	√	√
GENERAL	OUTLANDER-PHEV	R-MCU	√	√	√	√
GENERAL	OUTLANDER-PHEV	CMU1	√			√
GENERAL	OUTLANDER-PHEV	CMU2	√			√
GENERAL	OUTLANDER-PHEV	CMU3	√			√
GENERAL	OUTLANDER-PHEV	CMU4	√			√
GENERAL	OUTLANDER-PHEV	CMU5	√			√
GENERAL	OUTLANDER-PHEV	CMU7	√			√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	OUTLANDER-PHEV	CMU8	√			√
GENERAL	OUTLANDER-PHEV	CMU9	√			√
GENERAL	OUTLANDER-PHEV	CMU10	√			√
GENERAL	OUTLANDER-PHEV	CMU11	√			√
GENERAL	PAJERO/MONTERO(V6#,V7#)	ENGINE		√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	AT		√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	ABS	√	√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	SRS	√	√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	SWS		√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	AC	√	√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	TCL/STABILITY CONTROL	√	√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	SS4II		√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	HBB		√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	IMMO	√	√	√	√
GENERAL	PAJERO/MONTERO(V6#,V7#)	AUTO CRUISE		√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	ENGINE	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	AT	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	ABS	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	SRS	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	SWS		√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	AC	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	METER	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	ETACS	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	IMMO	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	AUTO CRUISE	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	PAJERO/MONTERO(V8#,V9#)	SS4II		√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	HBB		√	√	
GENERAL	PAJERO/MONTERO(V8#,V9#)	DISPLAY	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	LIN	√	√	√	√
GENERAL	PAJERO/MONTERO(V8#,V9#)	CAN/LIN/SWS CONVERTER	√	√	√	√
GENERAL	PAJERO iO	ENGINE		√	√	√
GENERAL	PAJERO iO	ABS	√	√	√	√
GENERAL	PAJERO iO	SRS	√	√	√	√
GENERAL	PAJERO iO	SWS		√	√	√
GENERAL	PAJERO iO	AT		√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	ENGINE		√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	ABS	√	√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	SRS	√	√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	ETACS	√	√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	AT		√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	AUTO CRUISE		√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	AC	√	√	√	√
GENERAL	PAJERO SPORT/MONTERO SPORT(K8#,K9#)	IMMO	√	√	√	√
GENERAL	TRITON/L200(KA#,KB#)/STRADA(KA#,KB#)	ENGINE	√	√	√	√
GENERAL	TRITON/L200(KA#,KB#)/STRADA(KA#,KB#)	ETACS	√	√	√	√
GENERAL	TRITON/L200(KA#,KB#)/STRADA(KA#,KB#)	ABS	√	√	√	√
GENERAL	TRITON/L200(KA#,KB#)/STRADA(KA#,KB#)	SRS	√	√	√	√
GENERAL	TRITON/L200(KA#,KB#)/STRADA(KA#,KB#)	AT	√	√	√	√
GENERAL	TRITON/L200(KA#,KB#)/STRADA(KA#,KB#)	LIN	√	√	√	√
GENERAL	TRITON/L200(KA#,KB#)/STRADA(KA#,KB#)	IMMO	√	√	√	√

## Mitsubishi **V11.20** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions			
			Sys. Info.	Read Code	Clear code	Data Stream
GENERAL	ZINGER/FUZION	ENGINE	√	√	√	√
GENERAL	ZINGER/FUZION	ETACS	√	√	√	√
GENERAL	ZINGER/FUZION	SRS	√	√	√	√
GENERAL	ZINGER/FUZION	AT	√	√	√	√
GENERAL	ZINGER/FUZION	ABS	√	√	√	√
GENERAL	NEW CANTER 3.5T	ENGINE		√	√	√